 


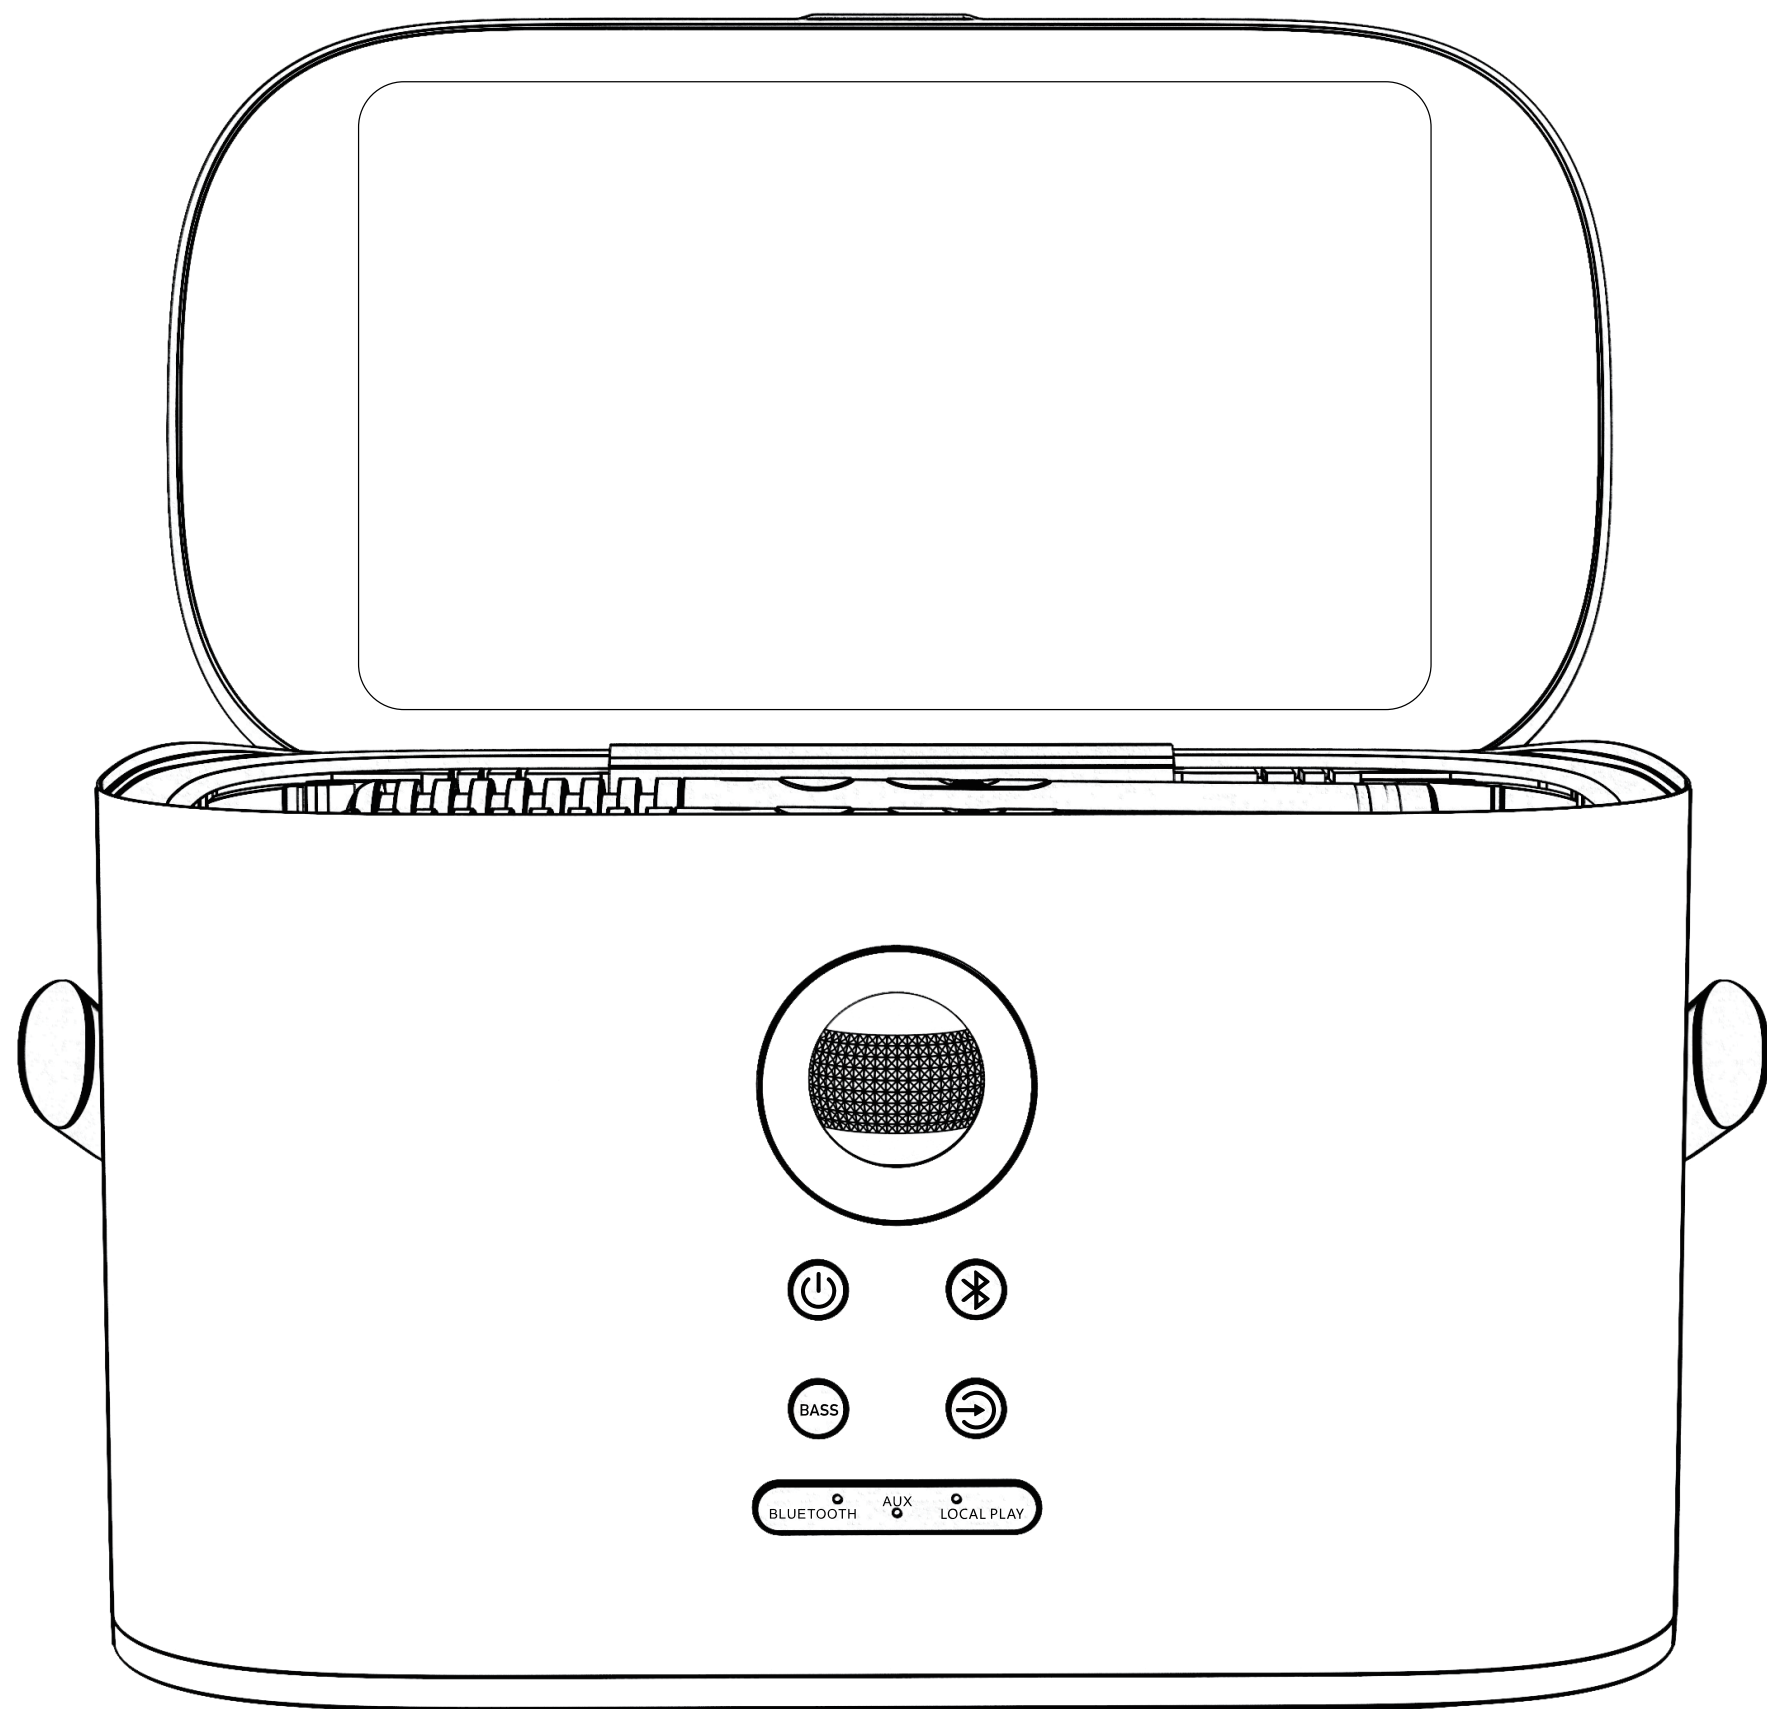

Ikarao®

Shell S2

Smart Karaoke Speaker

 
User Manual **EN**

Introduction:

Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the product. Keep the manual where it will be read by all who use the product.

For the Latest Information

The latest versions of the manuals are available from:
<https://www.ikarao.com/pages/support>

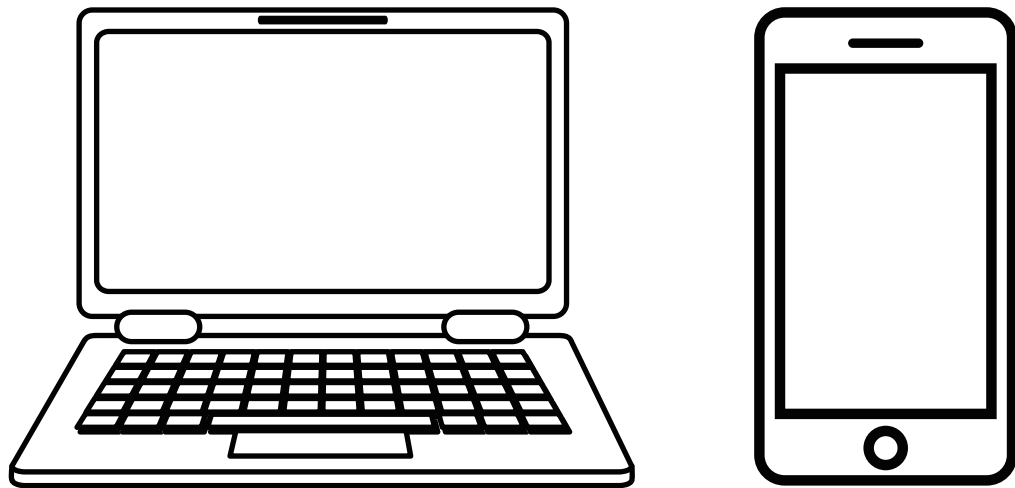

The website can be accessed not only from your computer but also from smartphones and tablets.



Table of Contents

Before You Begin

- **Parts of the Speaker..... 8-14**

Foldable Touch Screen.....	10
Microphone Charging Slot.....	10
Volume Roller.....	10
Power Button	10
Bluetooth Button.....	10
Bass Boost Button.....	11
Playback Mode Switch Button.....	11
3.5mm Microphone.....	13
Aux In.....	13
OTG.....	13
AUX OUT.....	13
USB.....	13
HDMI.....	14
USB-C Charging Port.....	14

- **Parts of the Microphones.....15-16**

Microphone Indicator Light.....	16
Microphone Power Button.....	16
Microphone Volume Control.....	16

Microphone Play/Pause Button.....	16
Microphone Wireless Charging Ring.....	16

- **Parts of the Homepage..... 17-20**

Aux Mode.....	18
Bluetooth.....	18
WiFi.....	18
Lighting Mode.....	18
Volume.....	18
Music Effect.....	19
Microphone Effect.....	19
Settings.....	19
Ikarao Service.....	19
Power Icon.....	20
WiFi Icon.....	20
Battery Icon.....	20
Time Icon.....	20

First Steps

Speaker Charging.....	22
Microphone Charging.....	23

Power On/Off.....24

• Basic Settings..... 25–32

About.....26

Brand Name

Model Name

Serial Number

App Version

Device Version

Version Update

Restore Factory Settings

Display..... 27

Brightness

Key Brightness

Sleep Time

Sound.....28

Wireless Mic Volume

Mic Mode

WiFi..... 29

WiFi On/Off

Refresh Available Networks List

Enter Wi-Fi Password

Wi-Fi Basic Information

Storage..... 30

Available Storage

Storage Control

USB Drive

TIME.....31

Automatic Time Update

24-Hour Format

Timezone

Language..... 32

Start to Play

• Local Media Player..... 34–37

Favorites.....35

Repeat Mode.....35

Play from Beginning.....35

Play/Pause.....35

Next Track.....35

Volume.....35

Playlist.....35

Add to Queue.....35

Create Playlist.....35

Batch Create Playlist.....36

Page Turning.....36

Quick Jump to Specified Page.....36

View Lyrics.....37

Different Display on External Screen.....37

Call Up Control Bar.....37

• Bluetooth Instructions.....38–39

Enter Bluetooth Mode.....	38
Connect Bluetooth.....	38
Disconnect Bluetooth.....	39
Display Lyrics in Bluetooth Mode.....	39
View Current Bluetooth Connected Devices.....	39
• Play With Third-Party APP.....	40
Open Control Bar.....	40
Return to Homepage from Third-Party App.....	40

Troubleshooting

• Network Issues.....	43-44
What to do if You are Unable to Connect to WiFi?.....	43
What to do if Wi-Fi is Connected but Unable to Access the Internet?.....	43
Why does Wi-Fi Disconnect Automatically?.....	43
Why does Music or Video Playback Stutter?.....	44
• Bluetooth Issues.....	44-45
Why does the Music Playback Stutter when Using Bluetooth?.....	44
Why can't I Find the Speaker When Pairing via Bluetooth?.....	44
Why does the First Connection to the Speaker's Bluetooth Fail Even	

Though It Is Found?.....	45
Why does Bluetooth Fail to Reconnect?.....	45


• Microphone Issues.....	46
Why is There no Sound from My Microphone?.....	46
Why does the Speaker's Music Volume Automatically Lower When I Sing with the Microphone?.....	46
Why can't the Microphone Power on?.....	46
• Local Player Issues.....	47
Should I Use Music Stored on a TF Card, USB Drive, or External Hard Drive?.....	47
Why does My Local Player Not Display Lyrics?.....	47

Technical Notes


Safety Usage.....	52-53
Battery and Power.....	54-55
Screen Usage.....	55
Certifications and Declarations.....	56-57
Product Technical Specifications.....	58-59

Supplied Accessories

 
The following are included with the speaker:

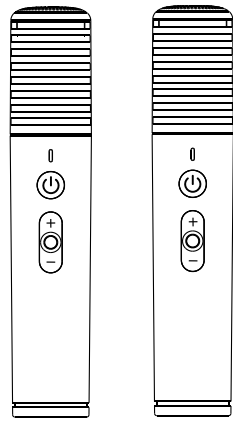


Wireless Microphones * 2

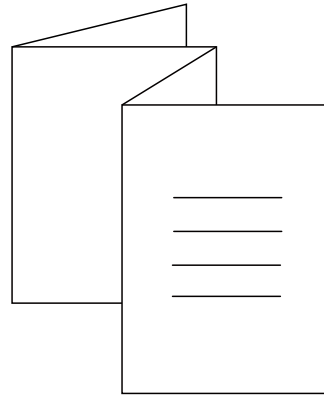 

Quick Start Manual

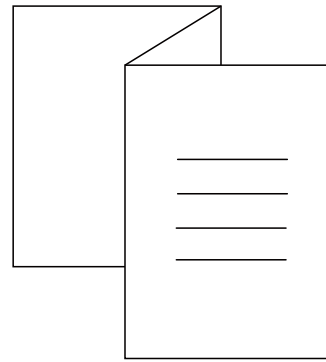 

Warranty Card

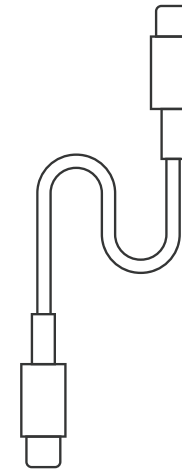 


Type-C Power Cable




01 Before You Begin

 Parts of the Speaker

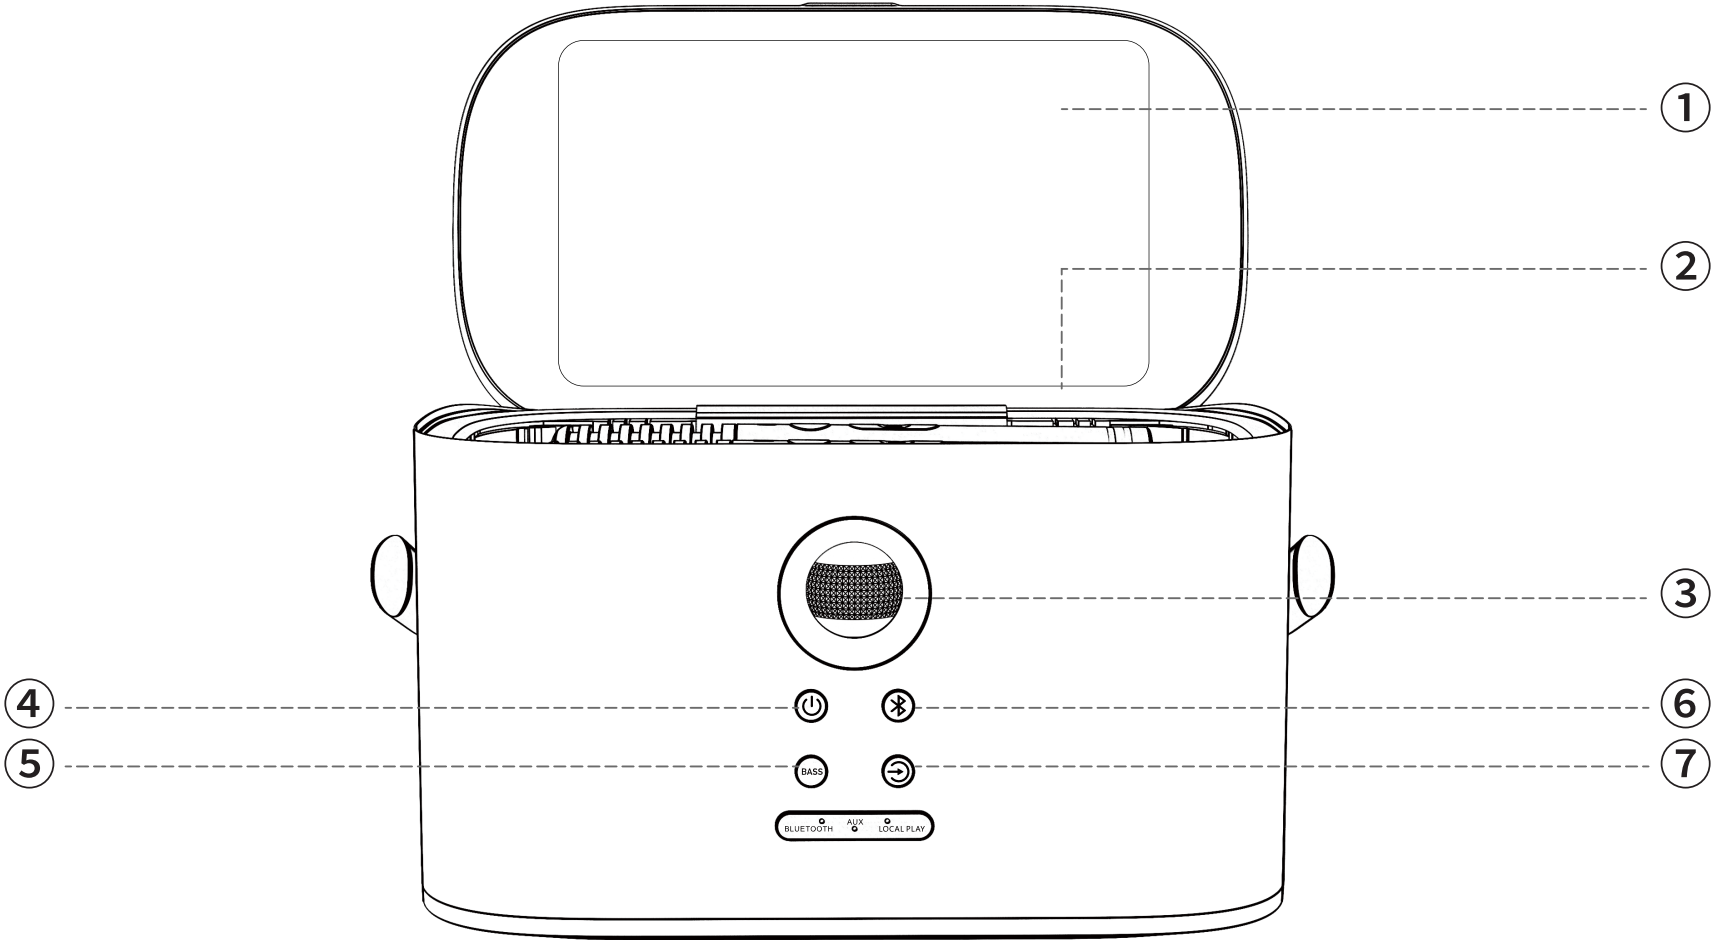

① Foldable Touch Screen.....	10
② Microphone Charging Slot.....	10
③ Volume Roller.....	10
④ Power Button.....	10
⑤ Bass Boost Button.....	11
⑥ Bluetooth Button.....	11
⑦ Playback Mode Switch Button.....	11
⑧ 3.5mm Microphone.....	13

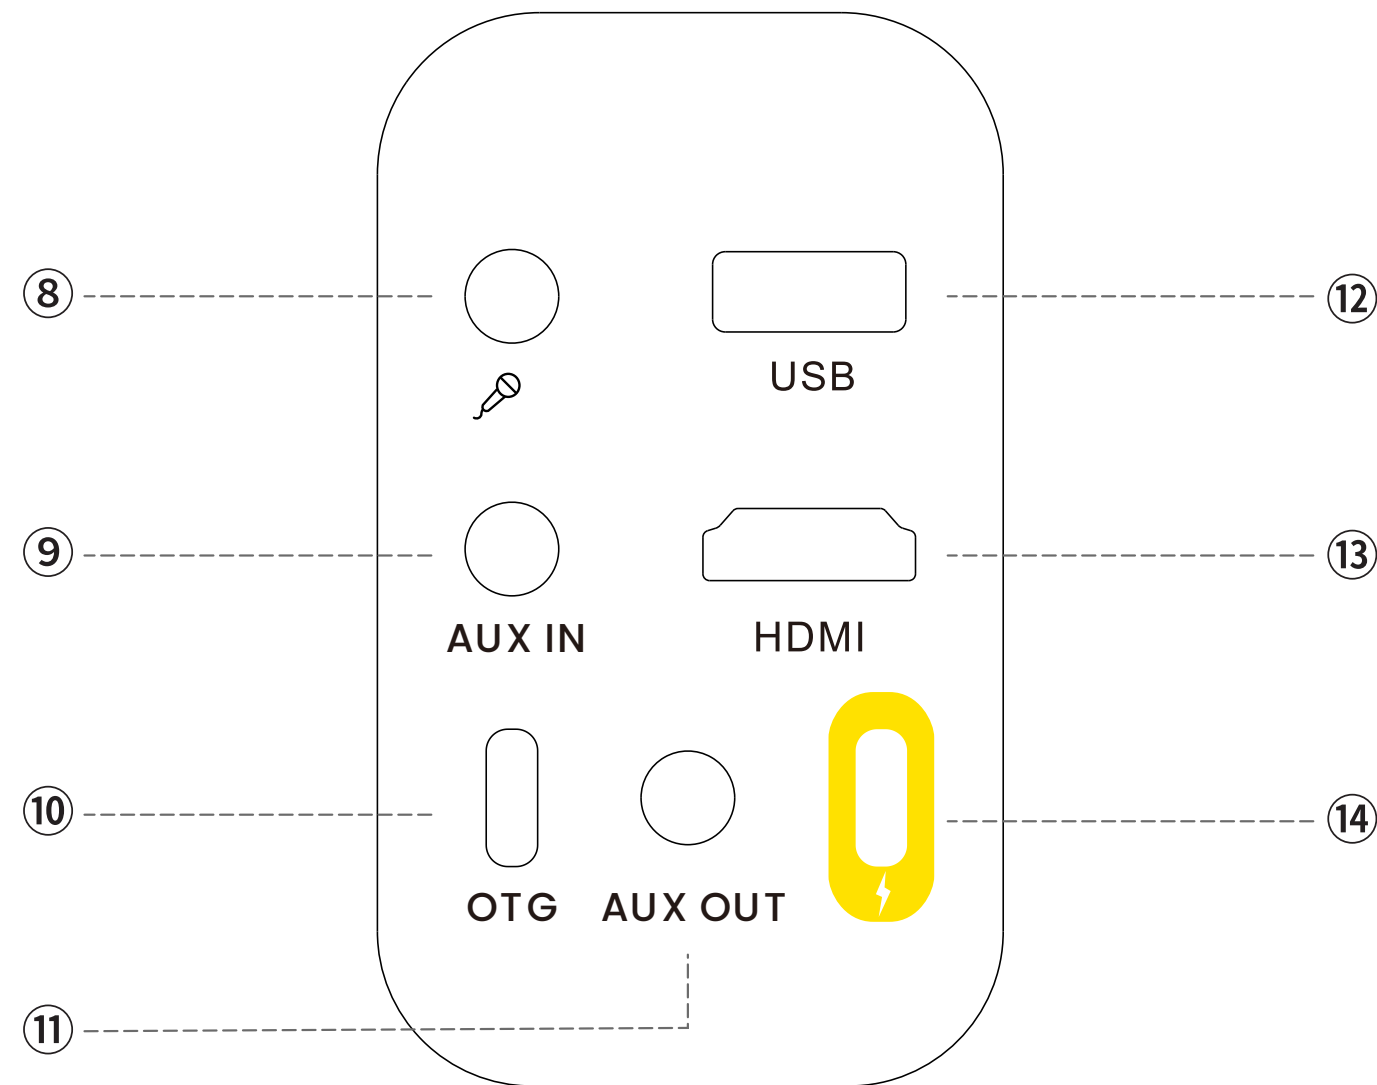 

⑨ Aux In.....	13
⑩ OTG.....	13
⑪ AUX OUT.....	13
⑫ USB.....	13
⑬ HDMI.....	14
⑭ USB-C Charging Port.....	14

Foldable Touch Screen

Supports a 120° fold, multi-point hover

Microphone Charging Slot

Stores and charges the microphones.

Volume Roller

You can adjust the speaker volume by toggling the left and right volume roller.
Microphone volume is controlled separately and not by this volume roller.

(For microphone volume control, please refer to  Page 16 - Microphone Volume Control)

Power Button

Press and hold the power button to turn the device on or off.
When the device is on, pressing the power button once toggles the screen on/off.

(For shutting down, rebooting, or screen operations via the screen, please refer to  Page 20 - Power Icon)

Bluetooth Button

Single-click the Bluetooth button to enter pairing mode and disconnect from connected Bluetooth devices.

(For playing music via Bluetooth, please refer to  Page 38 - Play With Bluetooth)

 
Bass Boost Button

Pressing the Bass Boost button enhances the bass effect

Playback Mode Switch Button

Pressing the play/pause button allows you to switch between three playback sources: LOCAL PLAY - Bluetooth - AUX.

(For playing music via AUX IN, please refer to  Page 13 - Aux In. For playing music via USB, please refer to  Page 13 - USB.)

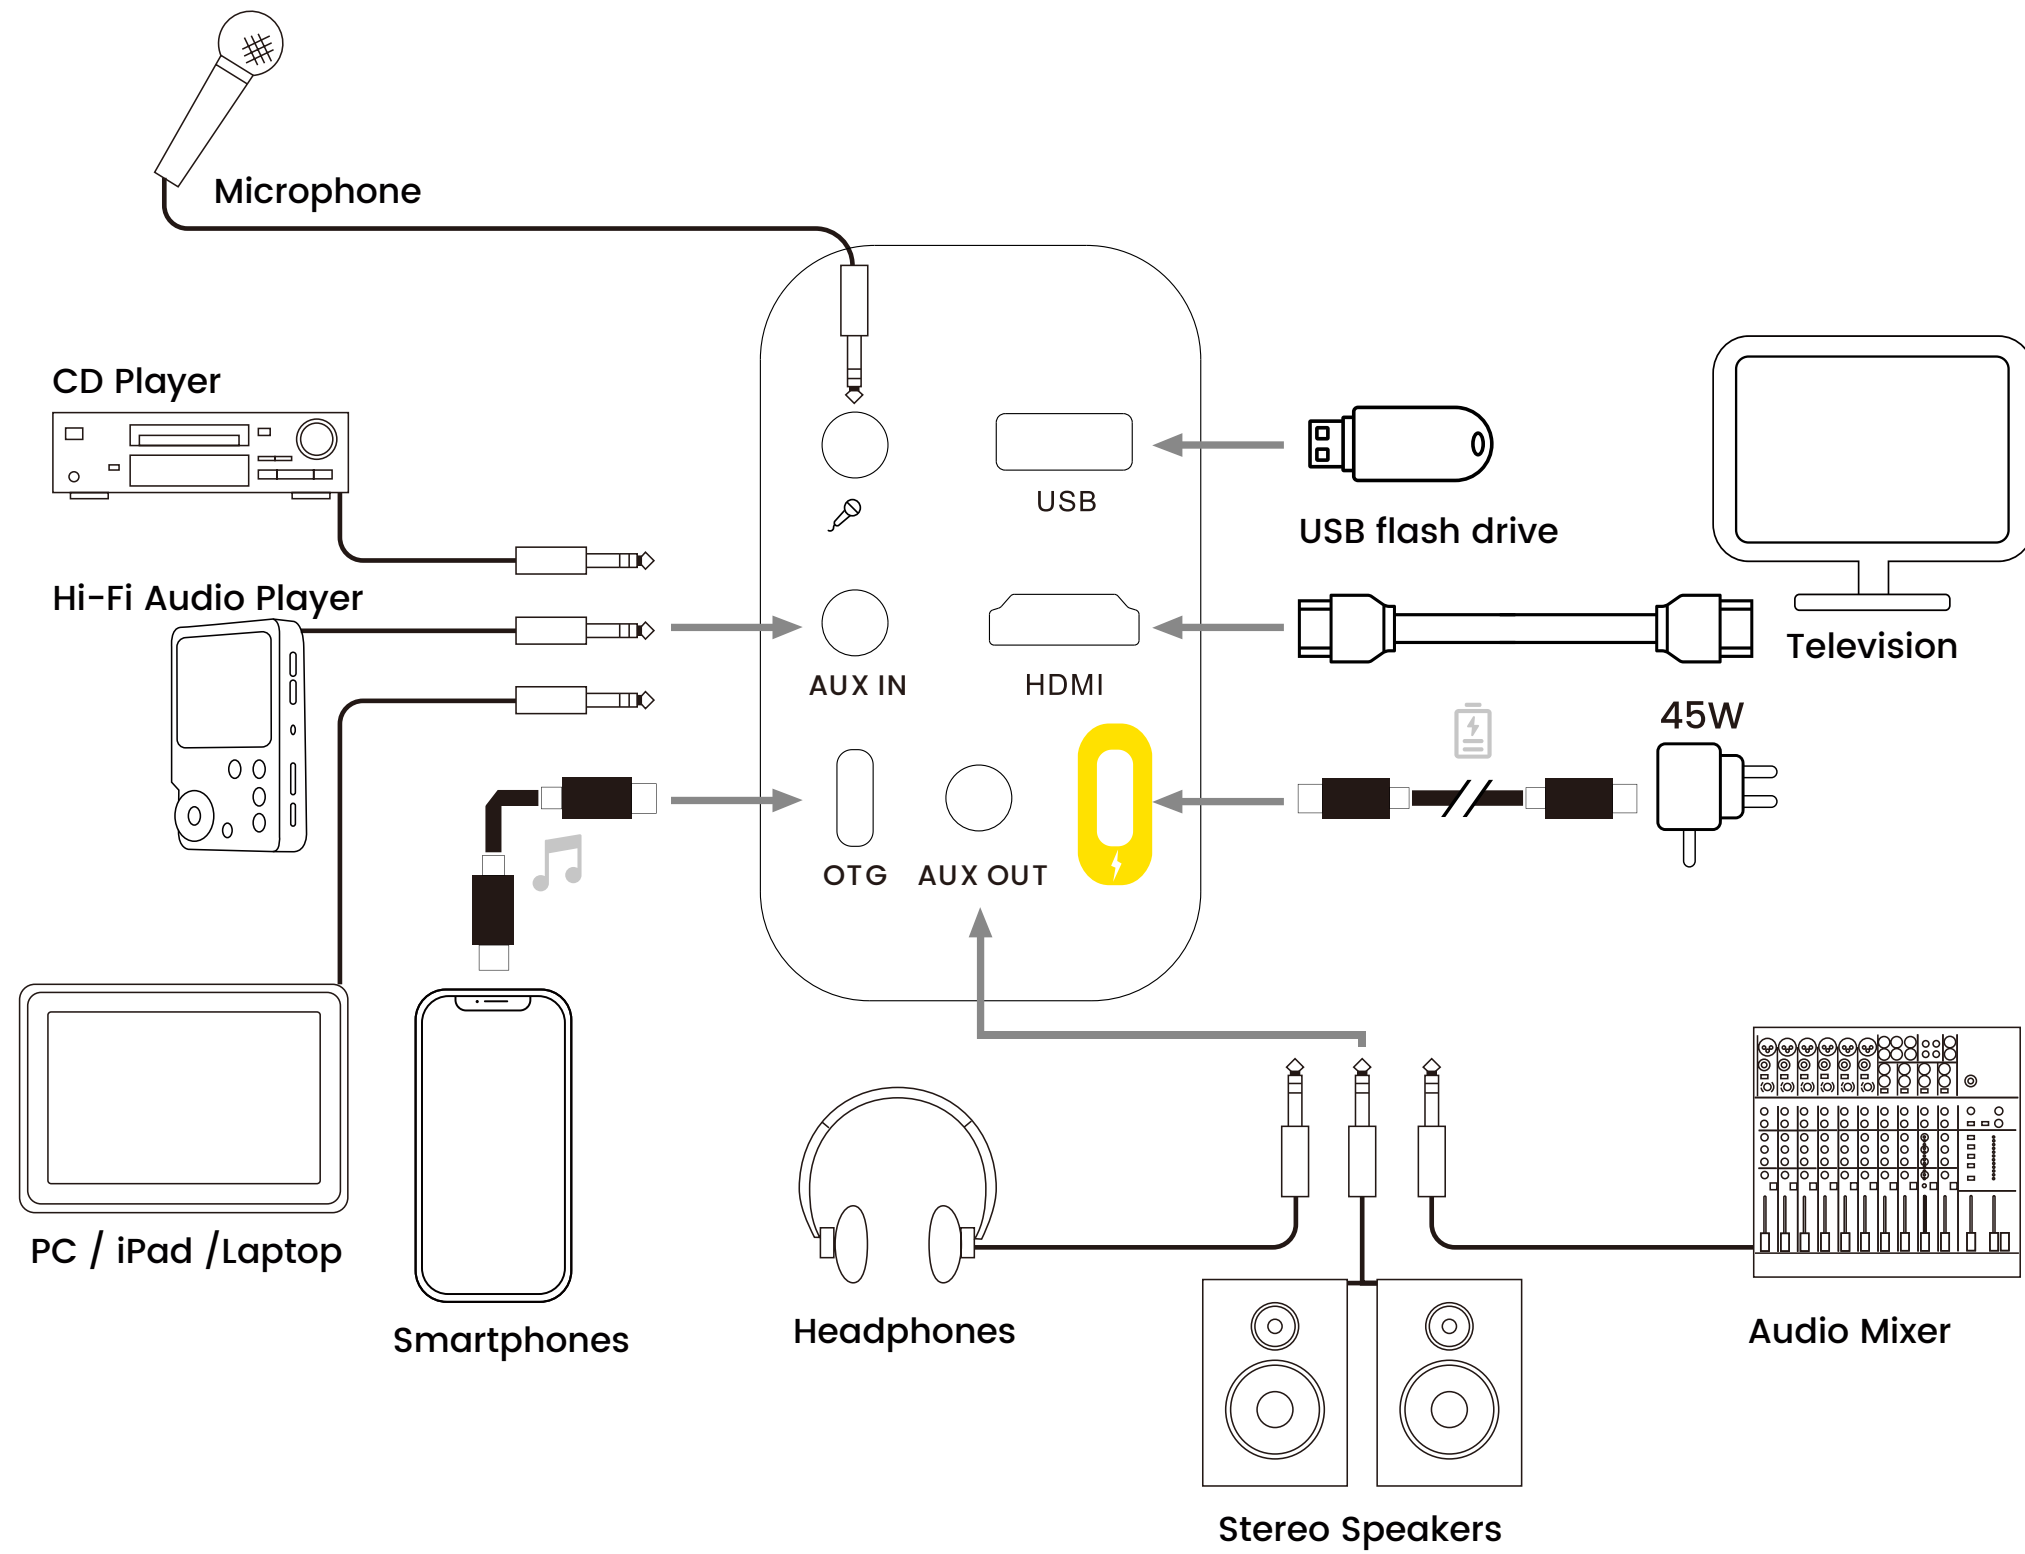

3.5mm Microphone

Supports connecting wired dynamic microphones via a 3.5mm audio cable.

Aux In

Allows external devices such as PCs, laptops, iPods, CD players, and digital audio players to be used as the Ikarao Speaker's audio source via a 3.5mm audio cable. When a device is detected in the Aux In port, the playback mode automatically switches to LOCAL PLAY

OTG

You can use the randomly included Type-C cable to connect the OTG port with devices such as laptops, smartphones, etc., for audio data transmission, enabling live streaming, recording, and sound card mode functions. The OTG function supports Android, iOS, Windows, and macOS.

Aux Out


Outputs all sounds, including from the speaker and microphone, via a 3.5mm audio cable. The speaker will be silent during this time. Use Aux Out to connect the Ikarao speaker to a higher-power sound system or for headphone monitoring.

USB

Supports external storage using USB drives or external hard drives, and provides 5V,1A power supply.

Supported Storage Formats	EXFAT/FAT32/NTFS/EXT4
Maximum Supported Memory	TF Card: 256GB USB: 1TB
Supported Media Codec Formats	AAC/AC3/APE/FLAC/M4A/MP2/MP3/WMA/OGG/3G2/3GP/AVI/FLV/MKV/MOV/MP4/MPG/VOB/WMV

 HDMI Port

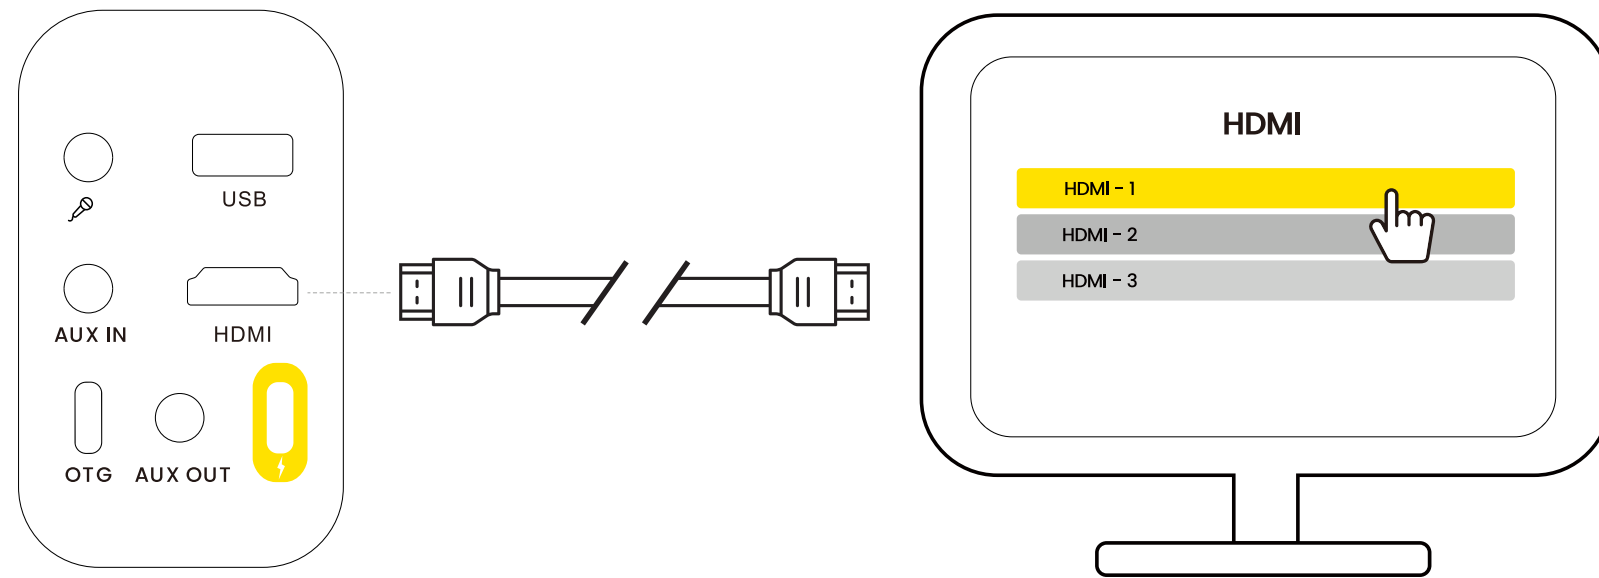


Use HDMI cable to connect to monitors, TVs, or projectors, supporting up to 1080P resolution. Compatible with HDMI protocols HDMI 1.4 and HDMI 2.0.

USB-C Charging Port

This product is equipped with a Type-C charging port and supports up to a 45W adapter for charging. When using a 45W adapter, you can charge the speaker while using it for fast charging, ensuring a stable user experience. With a 45W adapter, the charging time is less than 3 hours.

If you use a higher power adapter (over 45W), the speaker remains compatible and can still be charged without causing any damage to the device. Regardless of the adapter used, the charging performance will meet your daily needs.

 Parts of the Microphones

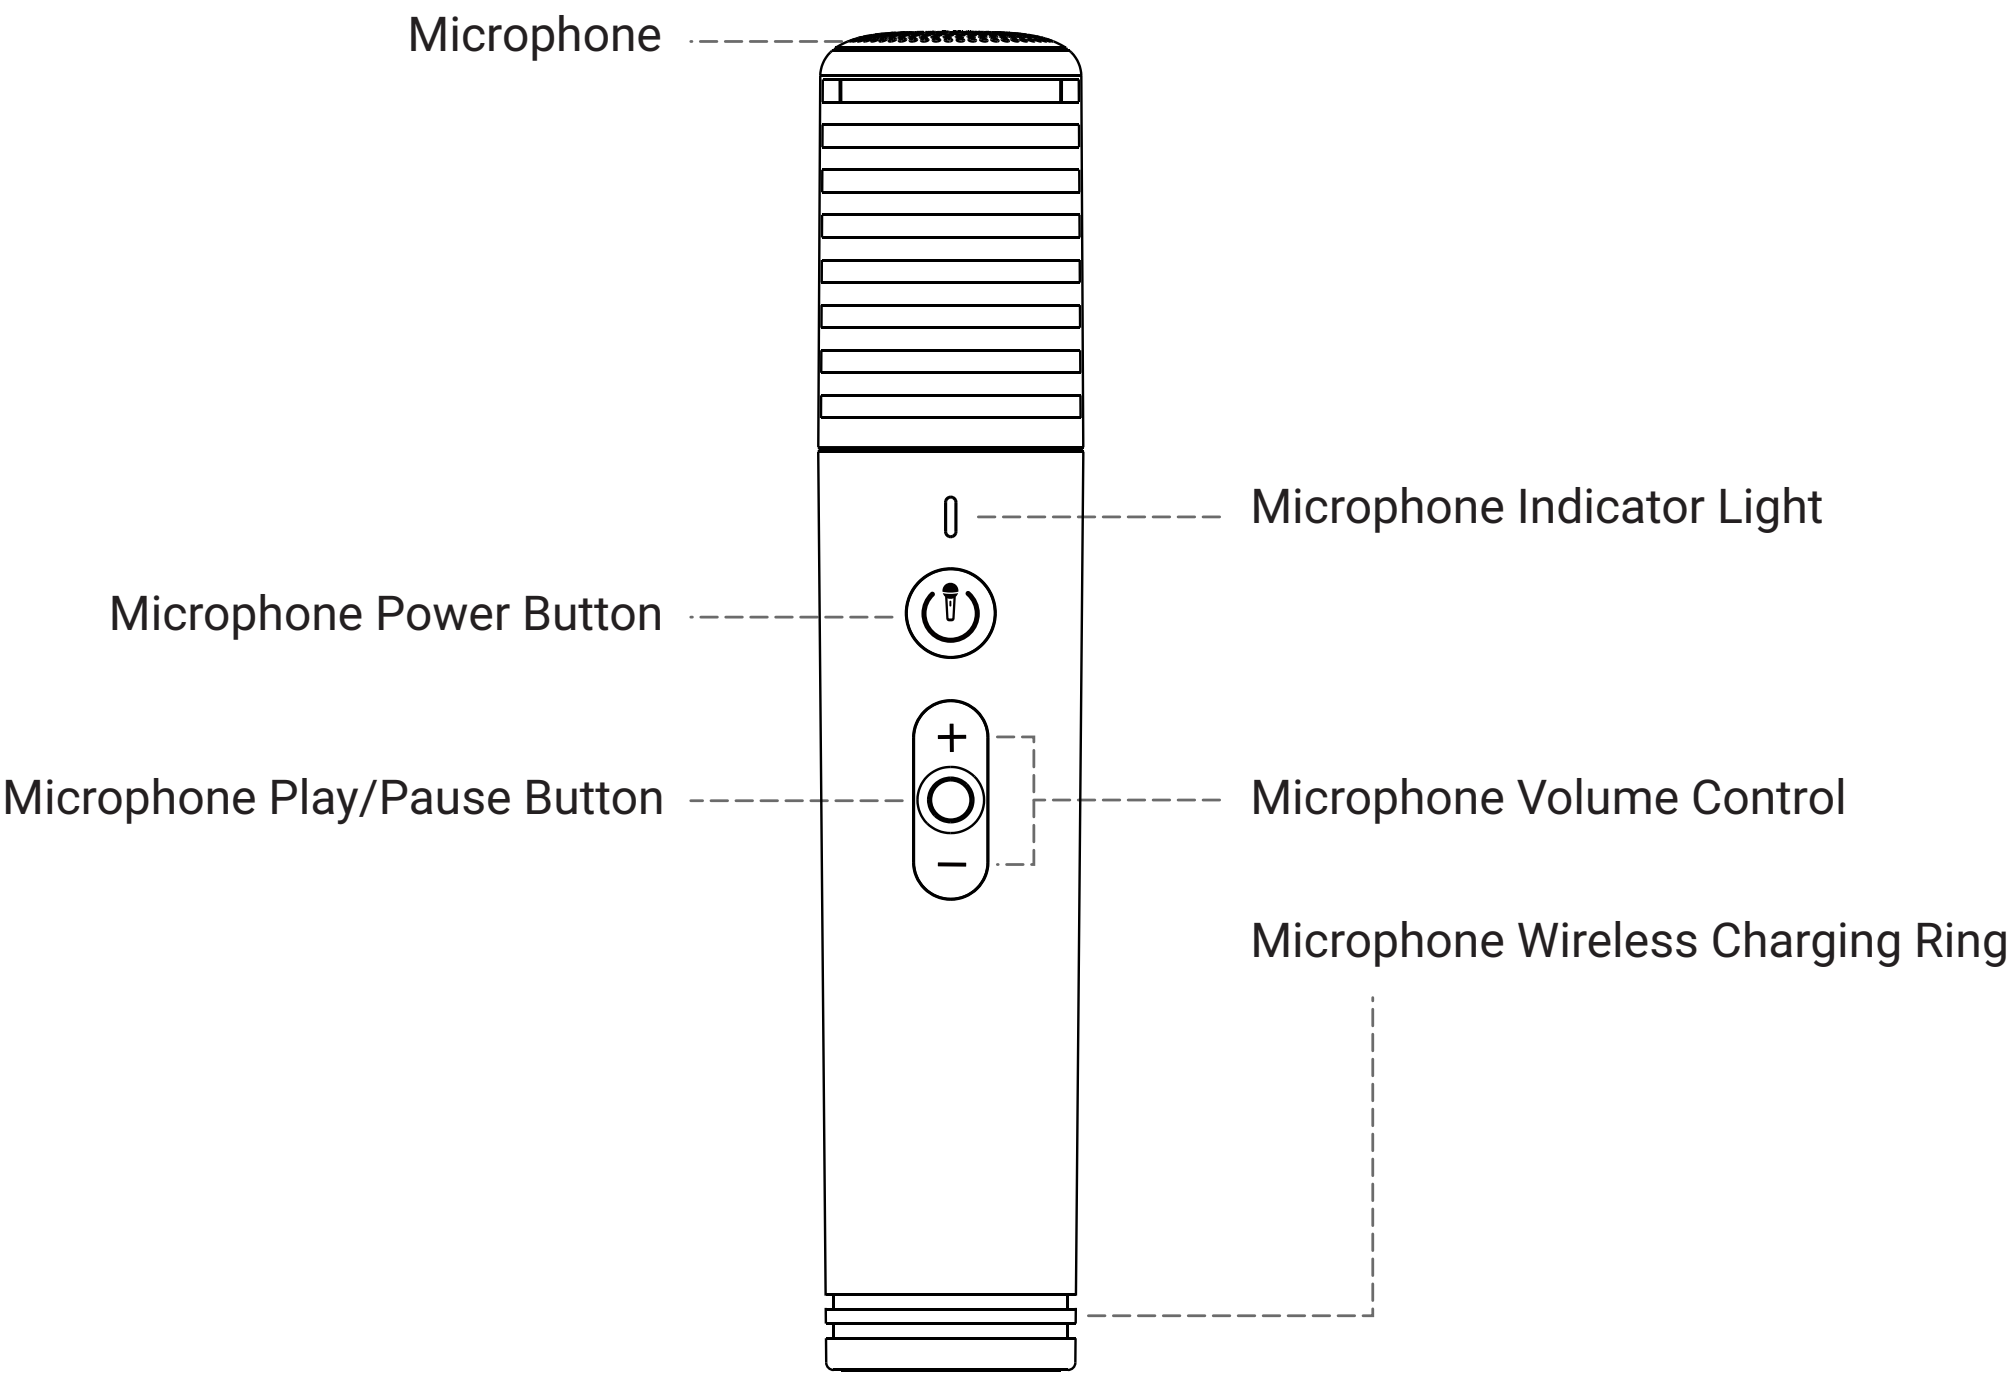

Microphone

Dynamic microphone cartridge for picking up sound signals.

Microphone Indicator Light

Displays various microphone statuses.

Microphone Power Button

Press and hold for 2 seconds to power on/off;
Double-press to quickly switch sound effects.

Microphone Volume Control

 
Adjust the microphone volume.

Microphone Play/Pause Button

Press once to play/pause audio and video
(Bluetooth and Local Media Player).
Press and hold for 2 seconds to skip to the next song.

Microphone Wireless Charging Ring


For wireless charging of the microphone.
NOTE: Avoid spilling liquids on the wireless charging ring.

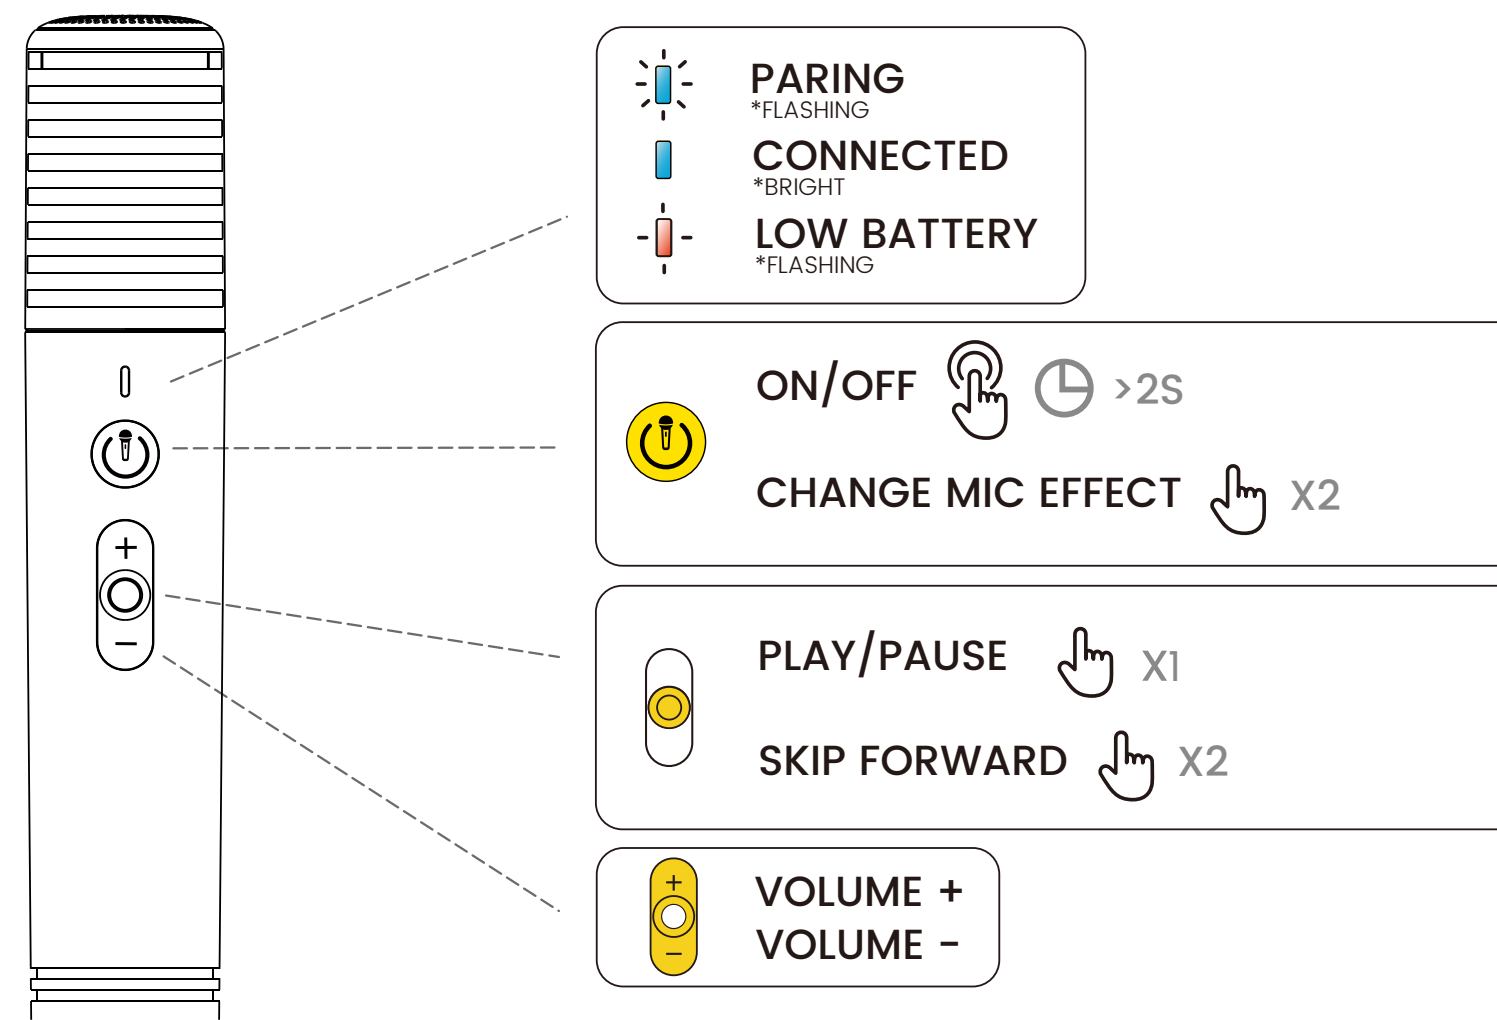

Change Mic Effect*:This operation will differ due to the version difference :  X2

Skip Forward*:This operation will differ due to the version difference:   >2s

 Parts of the Homepage

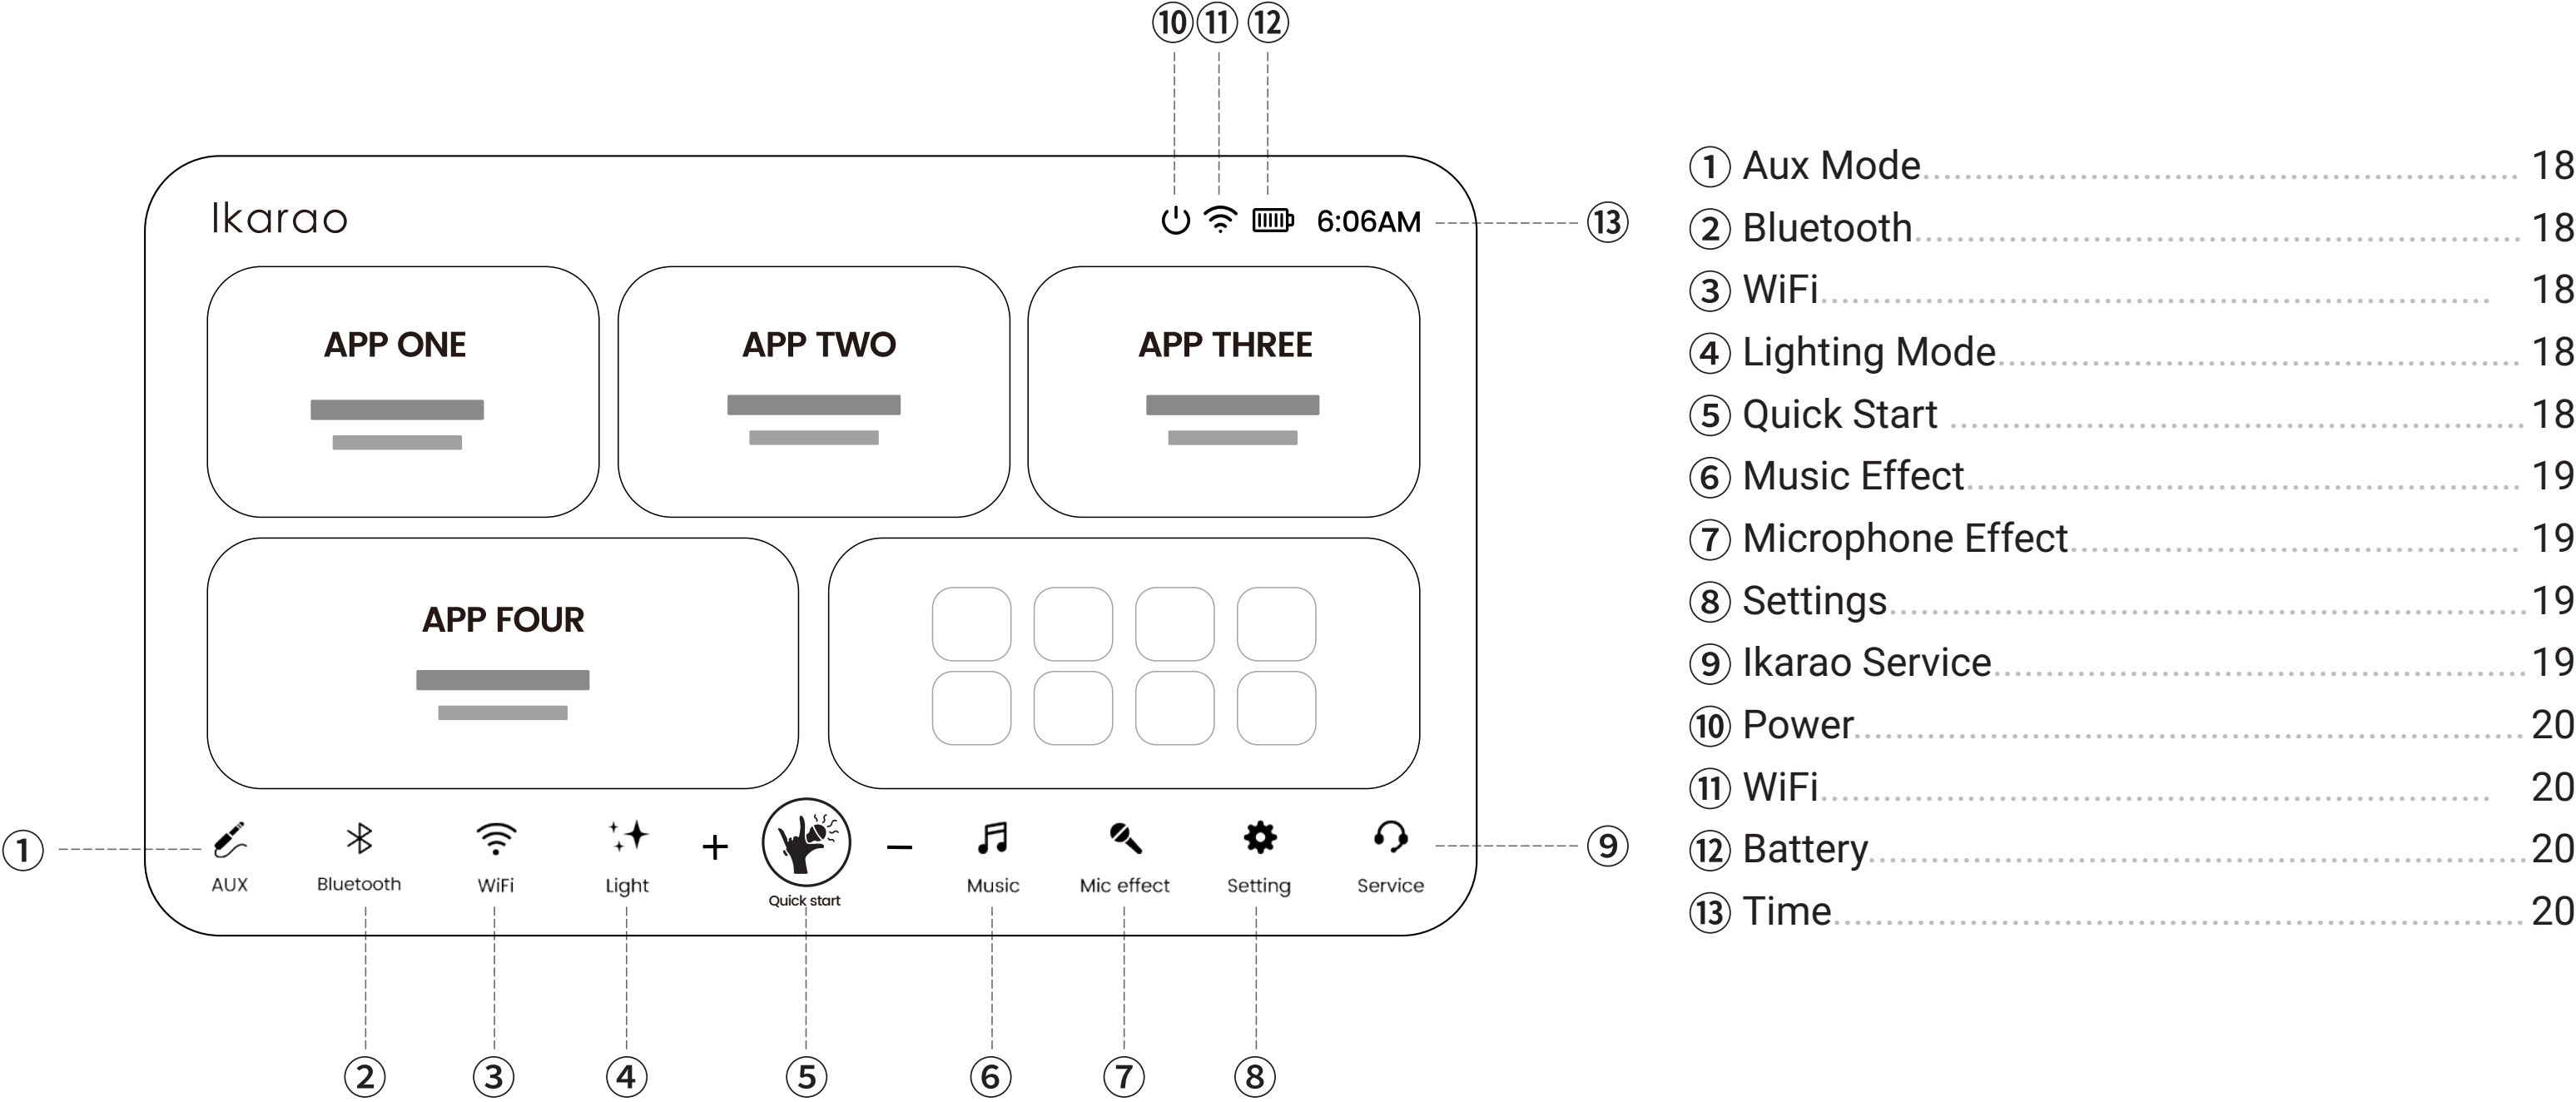

Aux Mode

Click to enter Aux Mode. You can also access it via the Playback Mode button. Connecting a device to Aux In will automatically switch to the Aux Mode page.

Bluetooth

Click to enter Bluetooth Mode. You can also access it via the Playback Mode button.

WiFi

Click to enter WiFi settings. You can also access it through the Settings menu.

Light

Click Light to enter light adjustment.

Quick Start

Smart app recommendations based on your song language.



Music Mode

Click to enter Music Mode to control the speaker's sound effects.

Sound Effect Mode	Description.
HiFi	Restores the purity of sound, focusing on original details and dynamics.
Light	Enhances midrange clarity, suitable for vocal-centric music.
Outdoor	Emphasizes bass and treble, effectively increasing loudness for outdoor use.
Bass	Boosts low frequencies to energize music, ideal for rhythmic tracks.

Microphone Effect

Click to enter microphone sound effect adjustment.

Settings

Click to enter settings.

 
(For detailed settings, refer to  Page 26-32 - Settings.)

Ikarao Service

Ikarao after-sales service page. You can scan the QR code or fill out a form to get technical support.

Power Icon

Click the Power icon on the screen to shut down, restart, or turn off the screen.

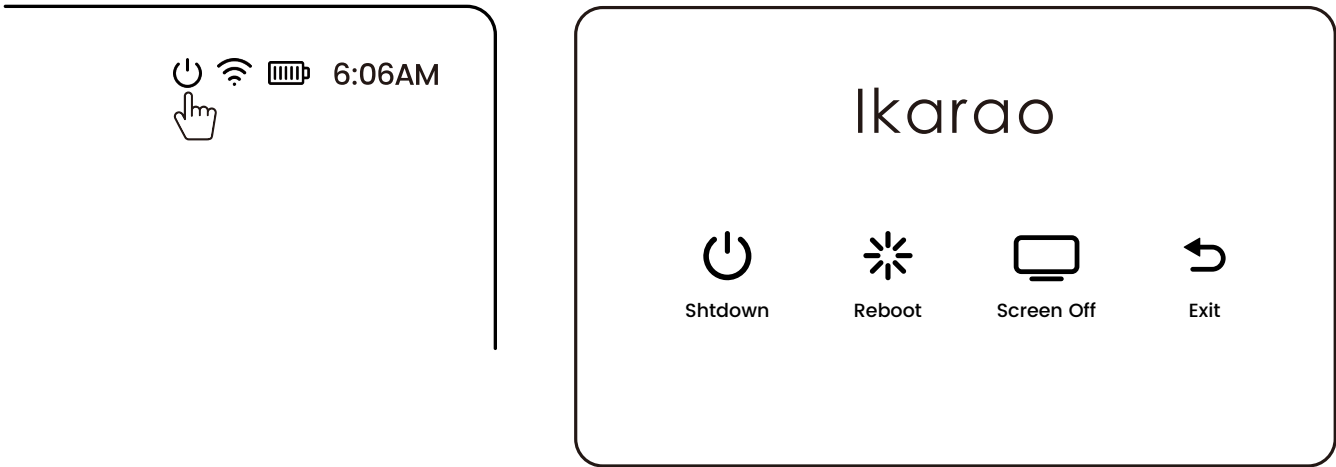

WiFi Icon

Indicates Wi-Fi is connected.

Battery Icon

Indicates battery status.

Time Icon

Displays the time. For first-time use, the time is automatically set when connected to the internet; otherwise, configure the time manually.

(For manual time configuration, refer to  Page 31 - Time)

 


02

First Steps

Speaker Charging

1 Charge speaker with Type-C cable

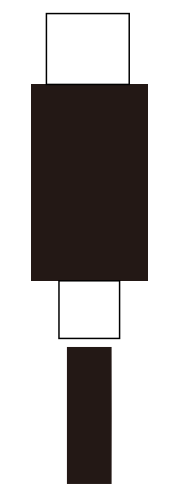

Type-C

2



 
LOW BATTERY
*SLOW FLASHING



CHARGING
*BREATHING




FULLY CHARGED
*OFF

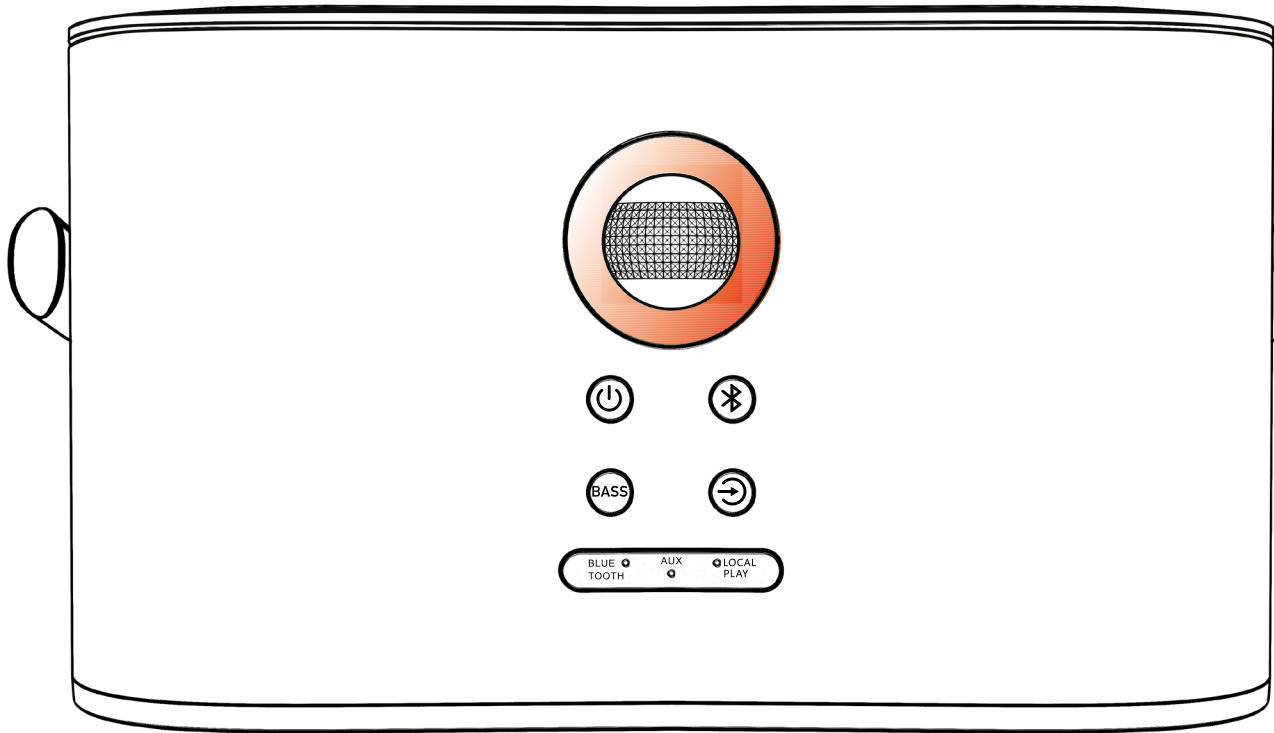

NOTE: This product does not include an adapter; the adapter needs to be purchased separately.
We recommend using a 45W Type-C adapter for a better user experience.

 
Microphone Charging

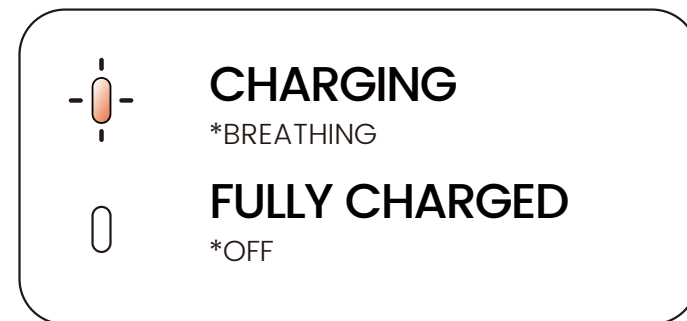


Place mics in magnetic charging slot

NOTE:

 1. Microphone has a 20-hour usage duration with a 5-hour full charge time.
2. The speaker stops charging the microphone in low power mode (around two battery bars).

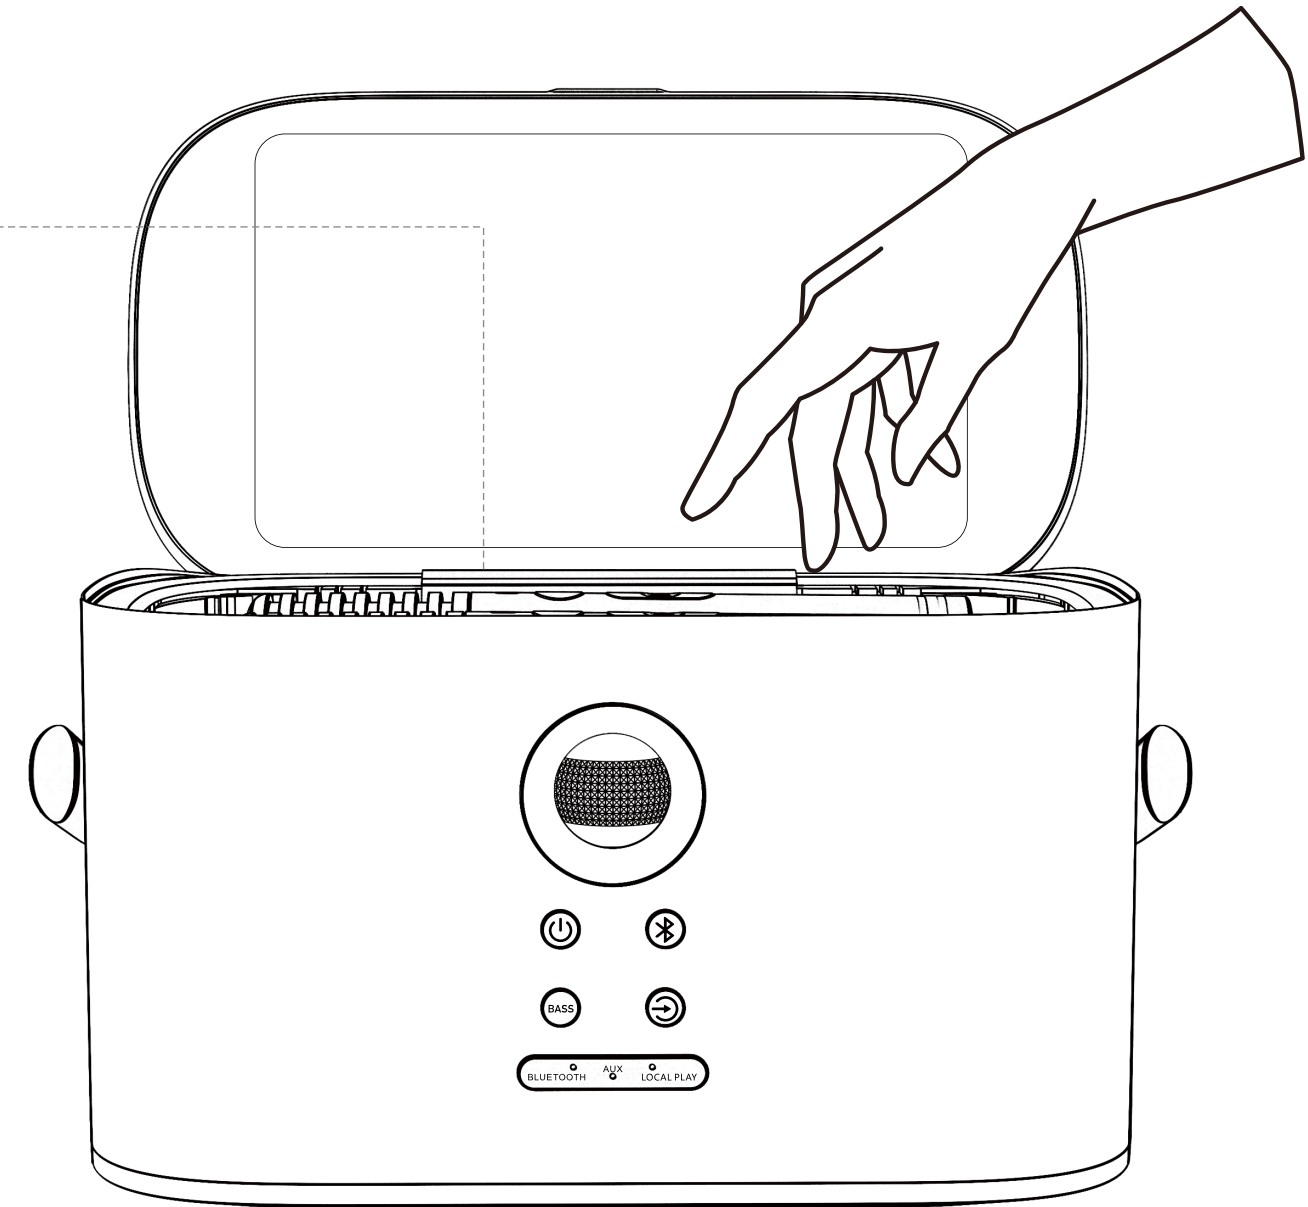


Power On/Off

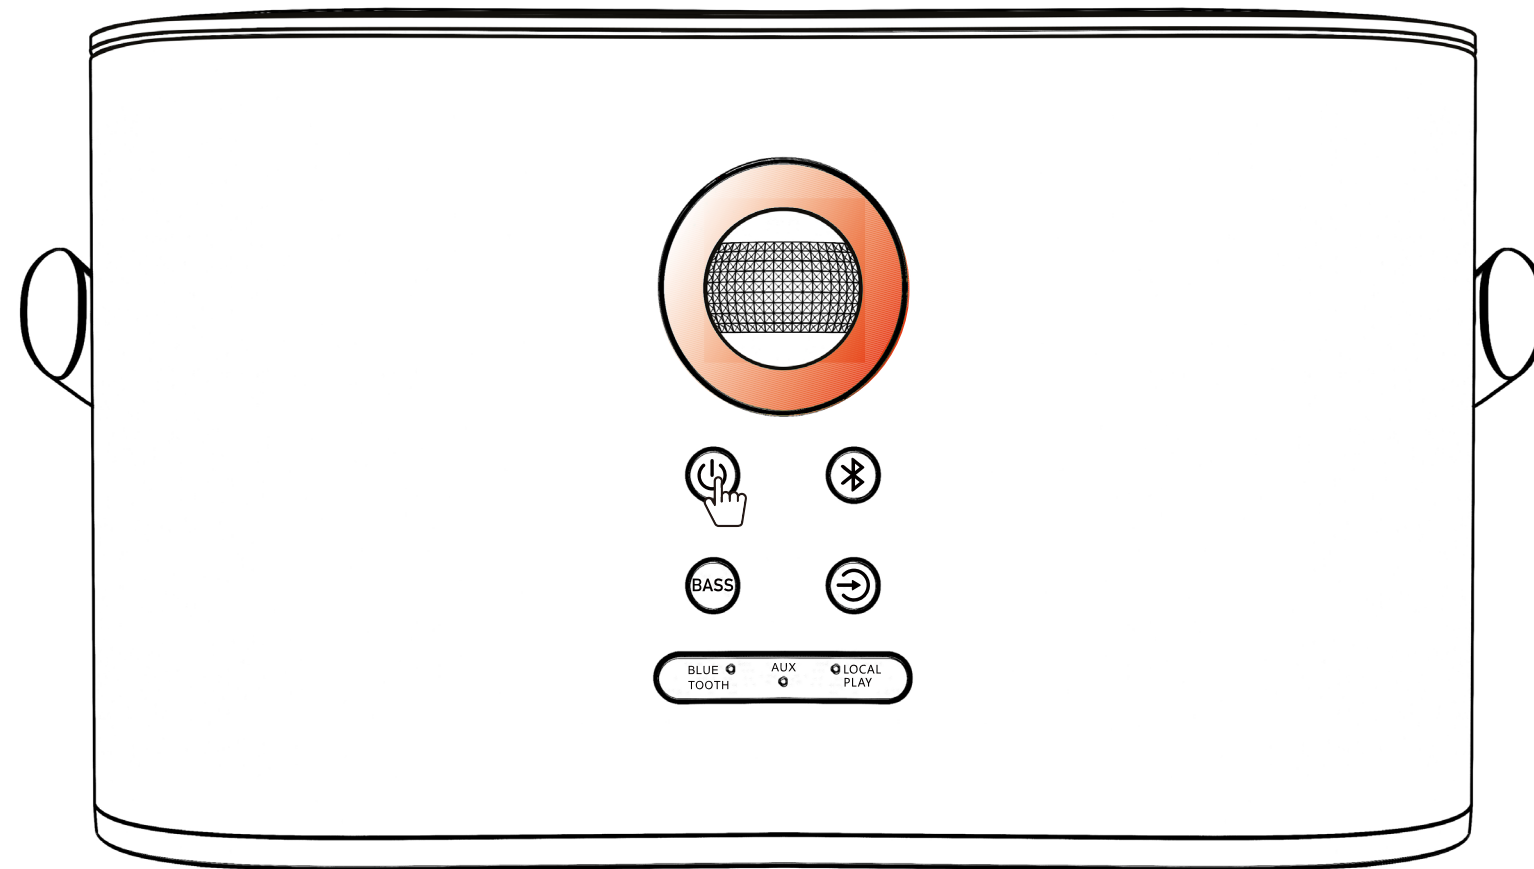 

Press and hold the power button for 3 seconds to turn the device on or off.
When the device is on, single-click the power button to turn the screen off or on.

 Basic Settings

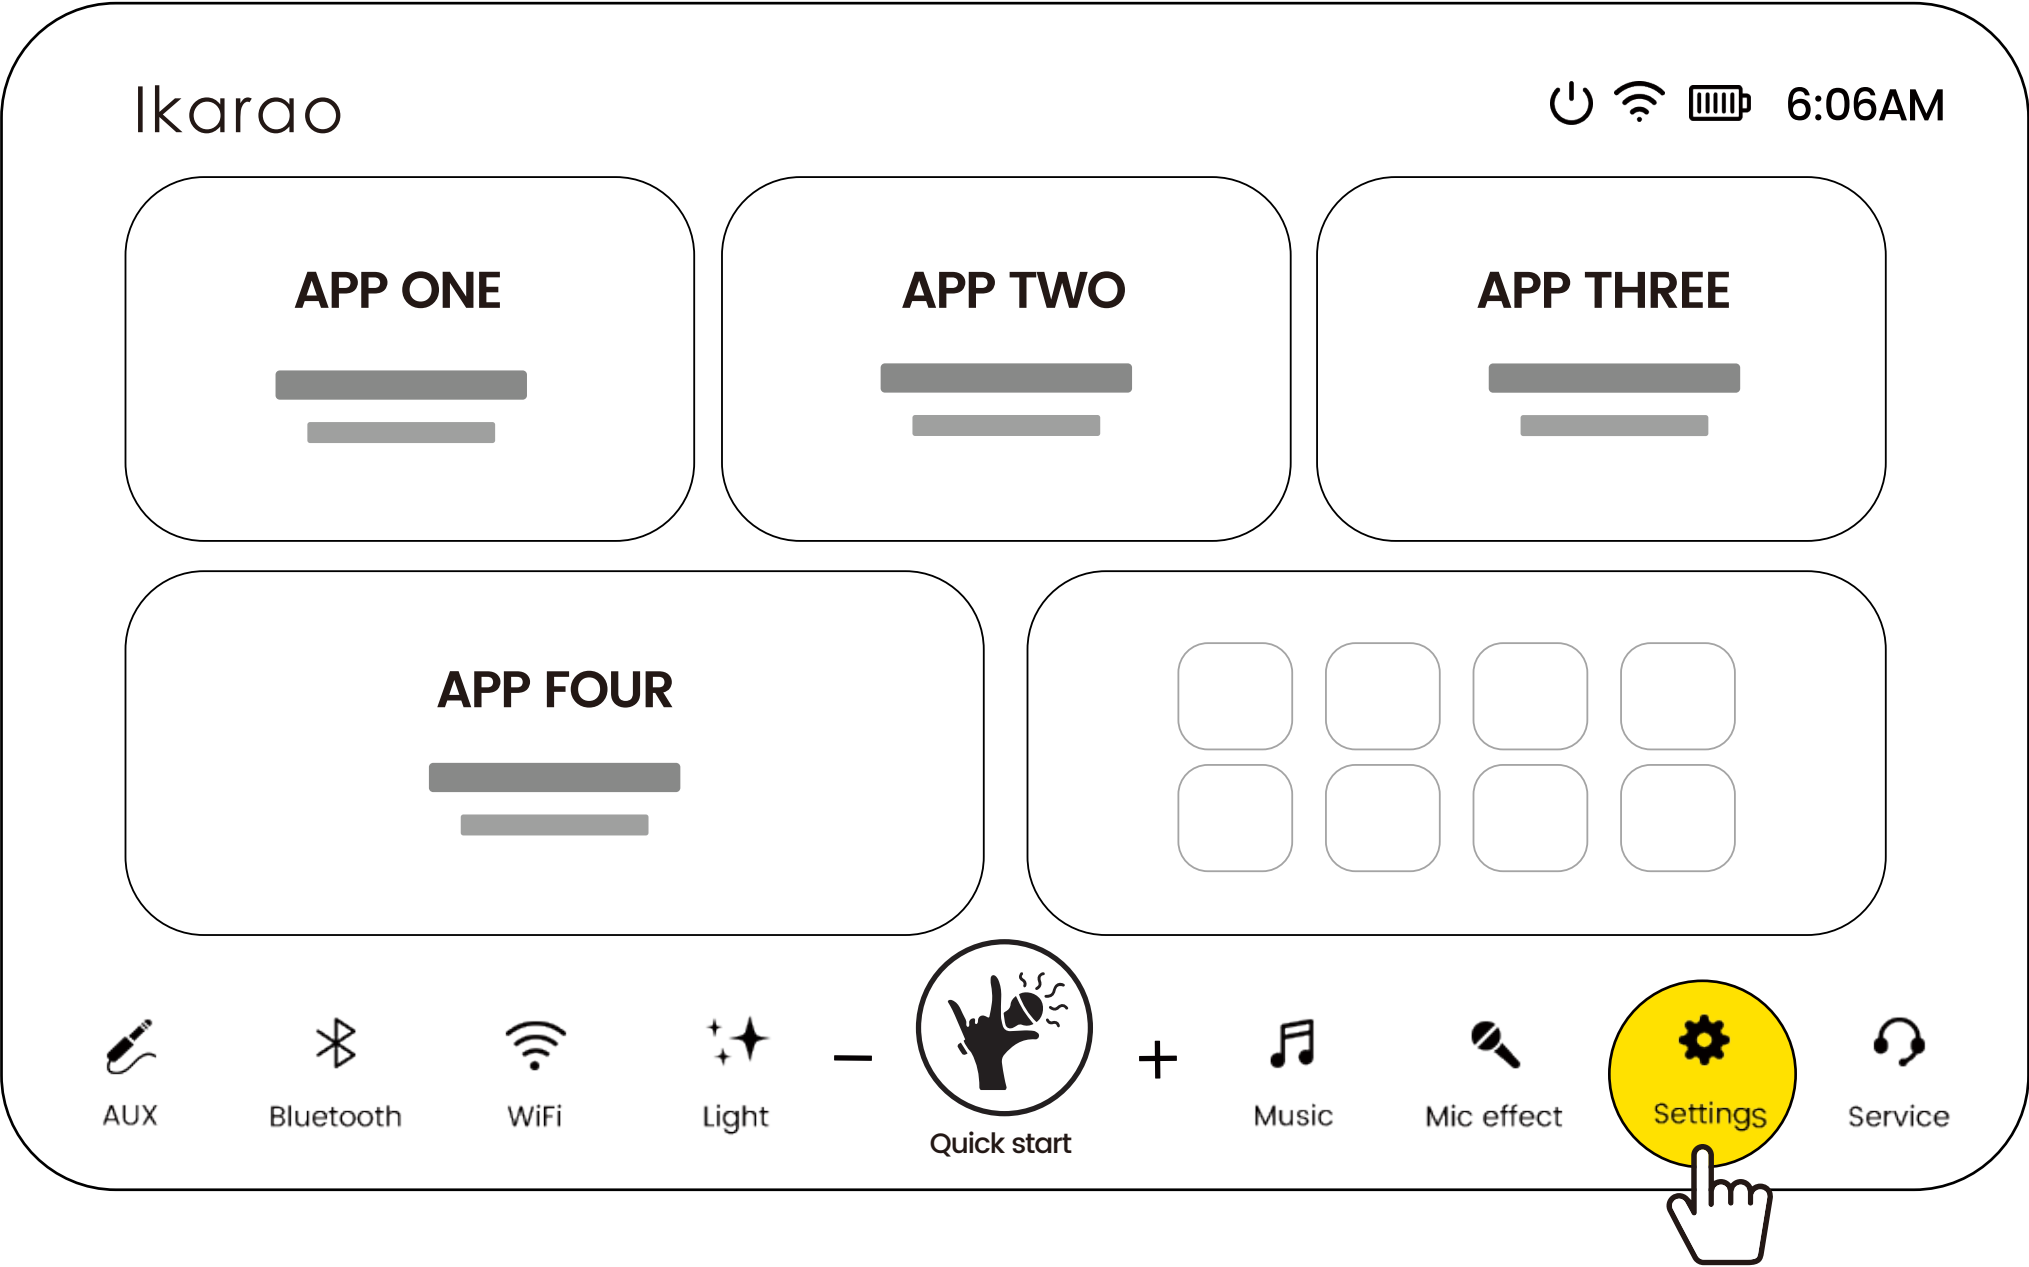

About

Brand Name

Displays the product name - Ikarao

Model Name

Displays the model of the device

Serial Number

The unique identifier for Ikarao products

App Version

The current system version

Device Version

The current device version

Version Update

Click "Detect New Version" to update the version. To ensure a successful upgrade, please connect to a power source or ensure the battery is above 50% before upgrading.

Restore Factory Settings

Click "Restore Factory Settings" to revert to factory settings.

Please Note:

1. This action will erase all user data.
2. After restoring factory settings, the speaker will automatically restart. The restart process takes about 2-3 minutes. Please keep the speaker connected to a power source, do not perform any operations, and wait patiently for the speaker to complete the startup process.

Display

Brightness

Drag the slider left or right to adjust the screen brightness.



Key Brightness

Drag the slider left or right to adjust the backlight brightness of the keys.



Sleep Time

Select the number of minutes of inactivity after which the device will automatically shut down.

Sound

Tone Volume

To control the volume of the prompt tone

Wireless Mic Volume

Indicates the connection status and volume of the wireless microphone



 
Mic Mode

Microphone mode switch

WiFi

WiFi Switch

Click the button to turn the WiFi on or off.



Refresh

 
If your WiFi name is not found, click Refresh to update the available network list.

Available Network




Enter Wi-Fi Password

- 1. Wi-Fi Password Display, Displays the entered Wi-Fi password.
- 2. Connects to the selected Wi-Fi network.



Wi-Fi Basic Information

 Displays basic information about the current Wi-Fi connection.

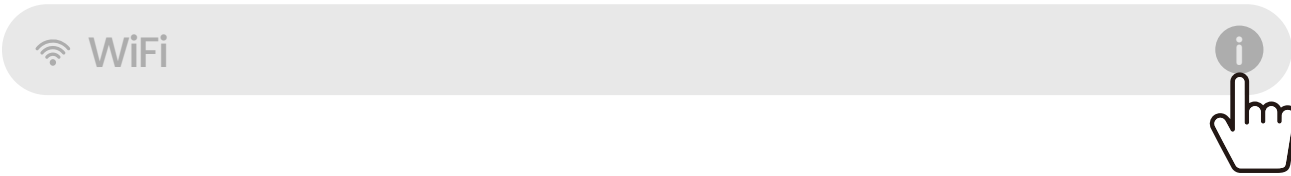

- 1. Connection Speed
Shows the maximum bandwidth of the connected Wi-Fi.
- 2. Signal Frequency
Indicates the frequency band of the current Wi-Fi.
- 3. Security
Indicates the encryption protocol of the current Wi-Fi.
- 4. IP Address
Displays the IP address of the current Wi-Fi.

Storage

Storage

Displays the current used storage and total storage.

Storage Control

Storage Control

 Cache xx.xxMB

One-Click Cleaning

Cleanup Acceleration

Cache **MB indicates the storage space occupied by the current cache.
One-Click Cleaning clears the cache with one click.

USB Drive

If you insert an external storage device, the used capacity/available capacity of the external storage device will be displayed here.

Time

Automatic Time Update

Automatically updates the current time.

24-Hour Format

Enables 24-hour time format.

Timezone

Select your region and timezone.

 
Time

If Automatic Time Update is off, you can manually set the time.

Date

If Automatic Date Update is off, you can manually set the date.

Language

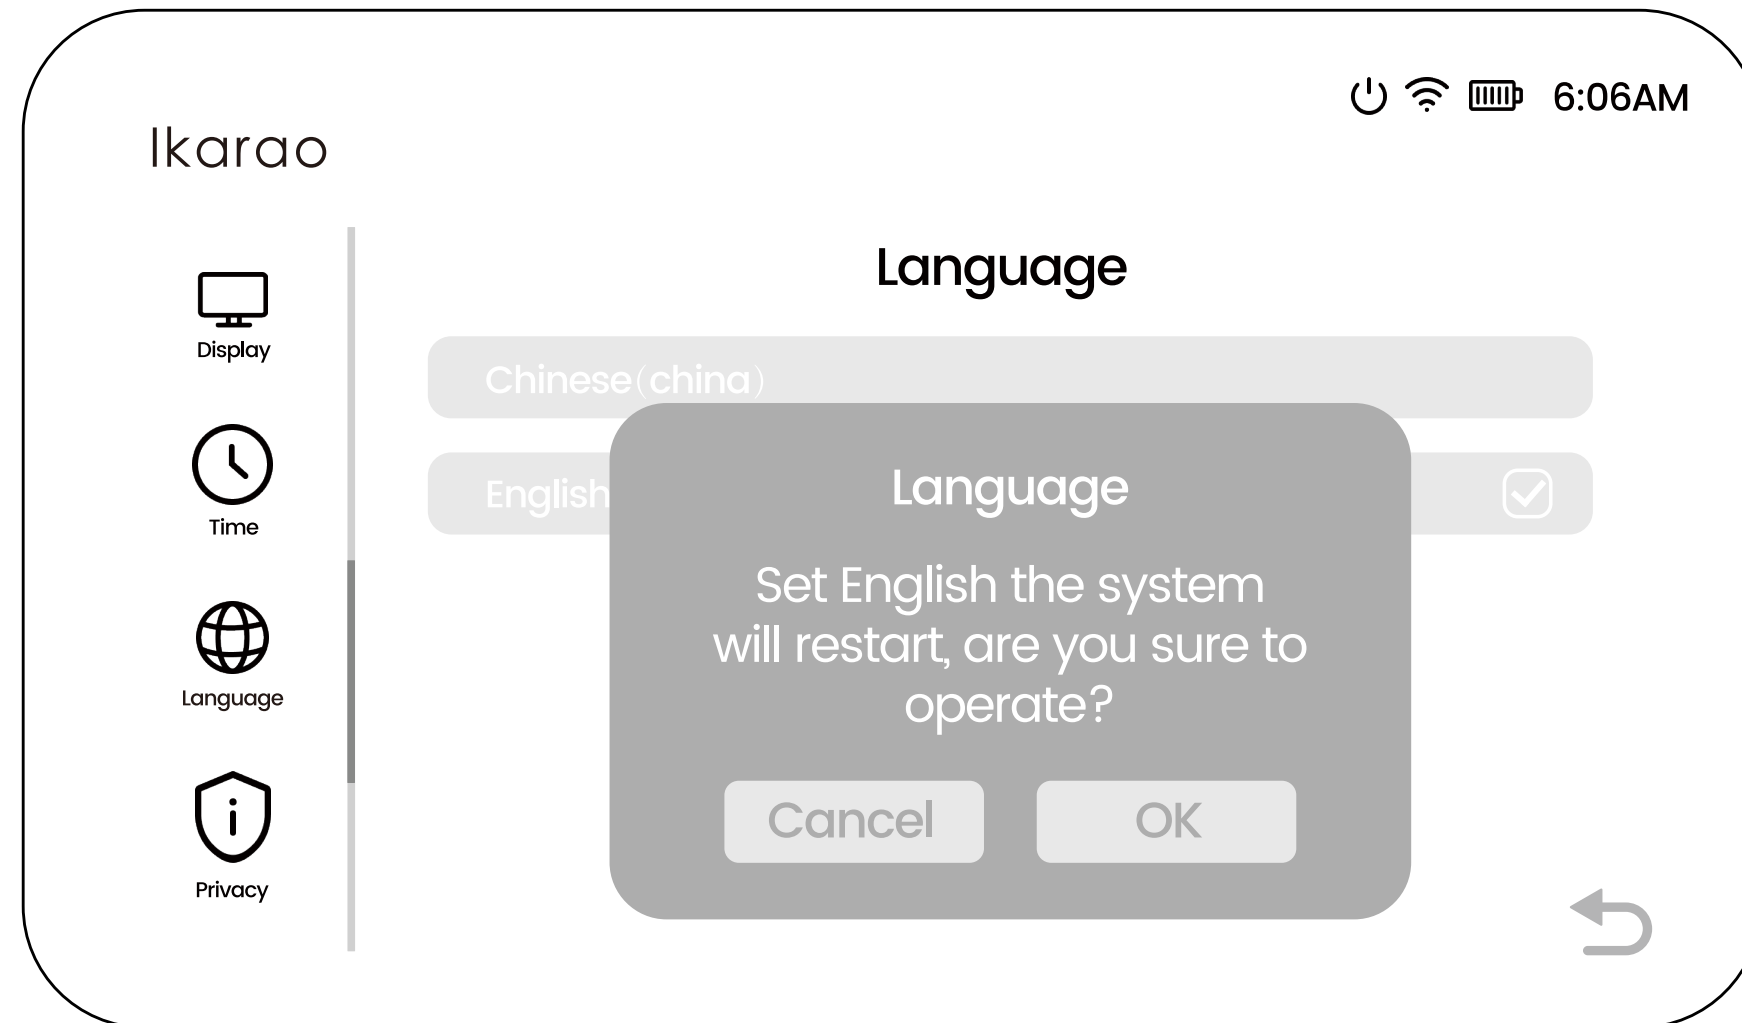

Select System Language

 
When switching languages, the Shell S2 will restart.
Please do not perform any other operations on the speaker during the restart.



03

Start to Use

Local Media Player

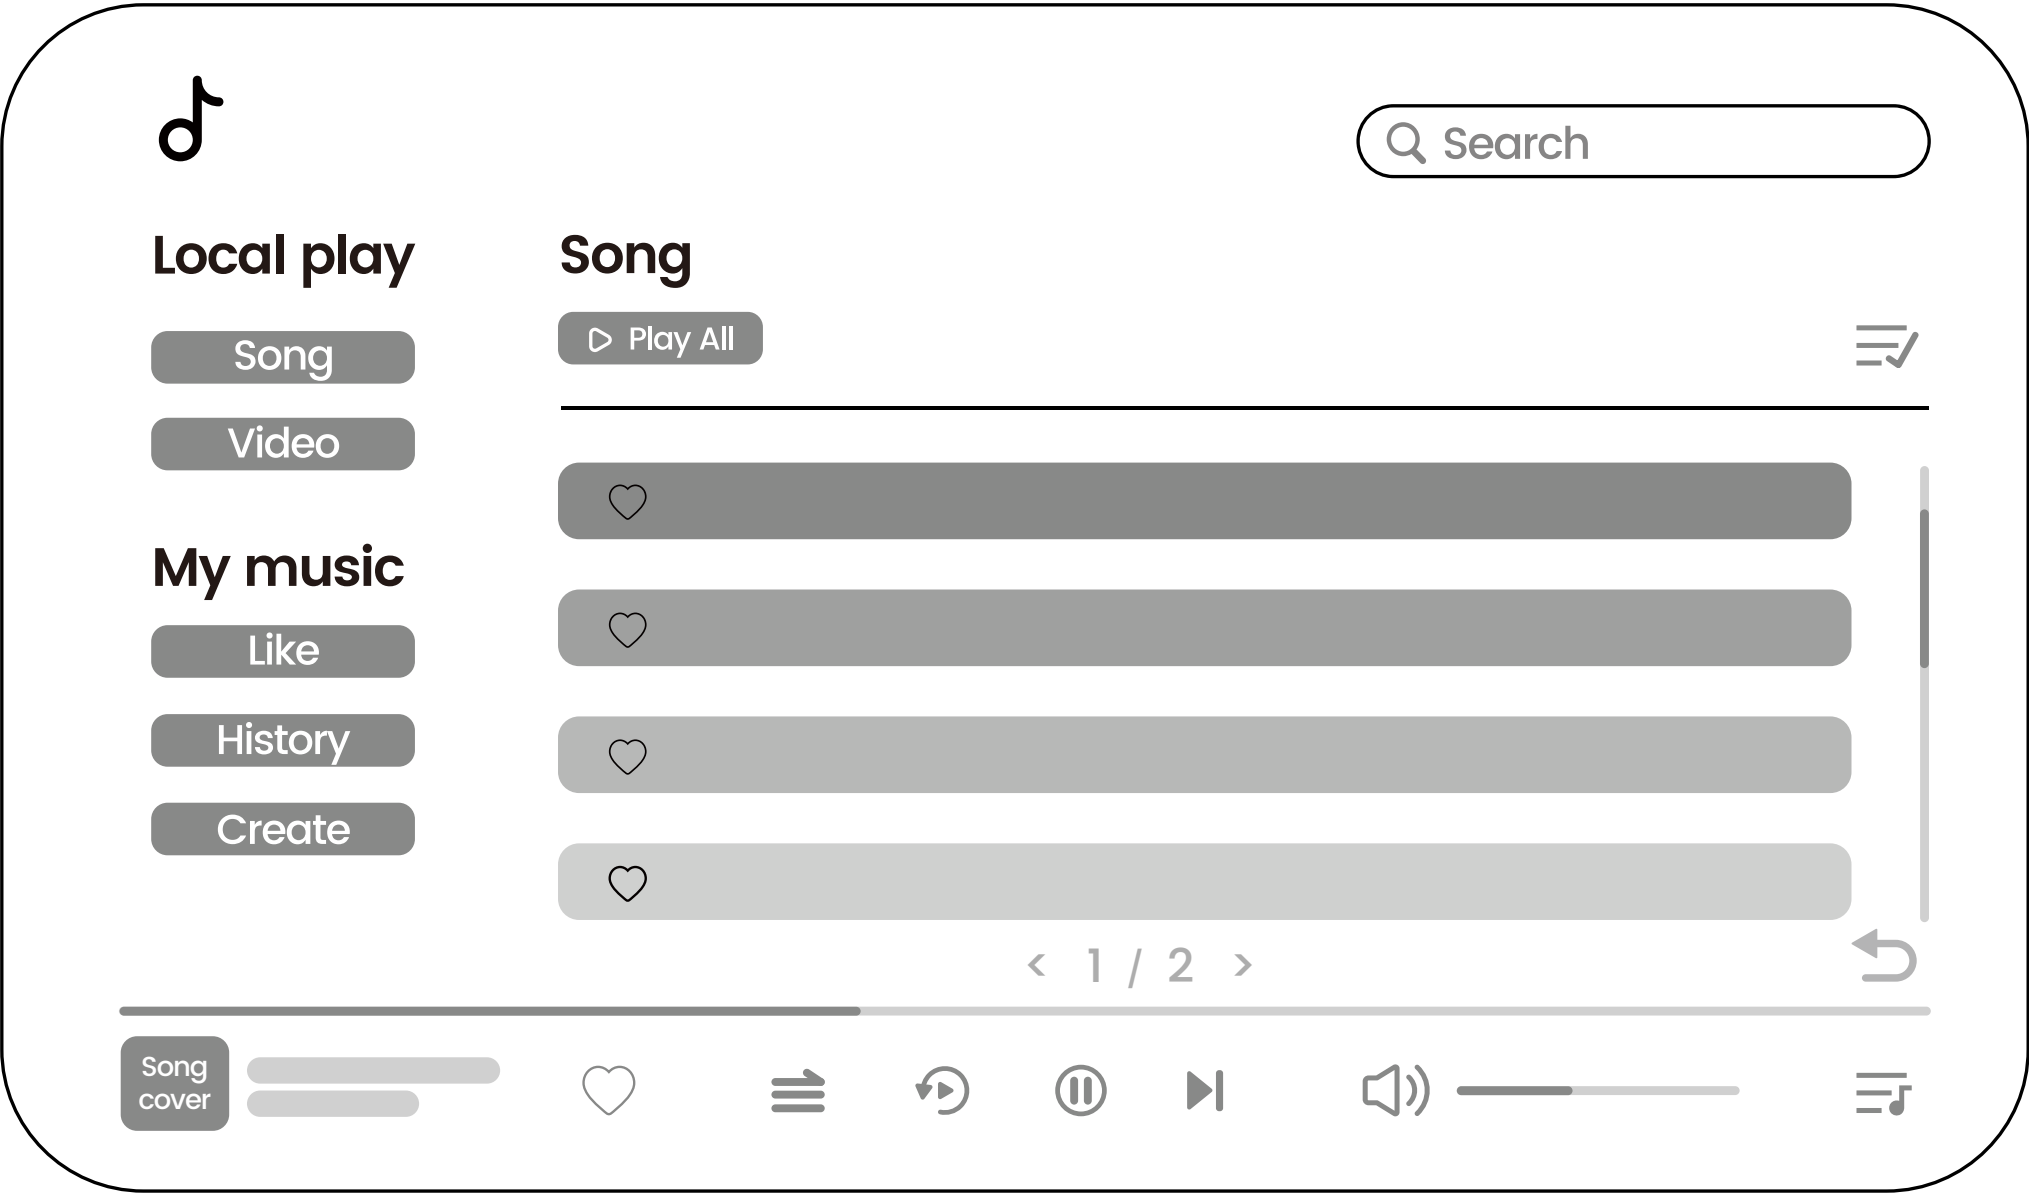

Favorites

Click the heart icon to add music to your favorites.
View favorites in the Like section.

Repeat Mode

Single repeat - Shuffle - Sequence play

Play From Beginning

Click to play from the start.

Play/Pause

Click to play or pause.

Next Track

Click to skip to the next song.

Volume

Drag to adjust the volume.

Playlist

Displays the current Playlist.

Add to Queue

Click the plus icon to add songs to the Playlist.

Create Playlist

Click Create on the Add to Queue page or in My Music to create a Playlist.

 
Create

Name:

Describe:

Name: Enter the Playlist name.
Description: Describe the Playlist.

Batch Create Playlist

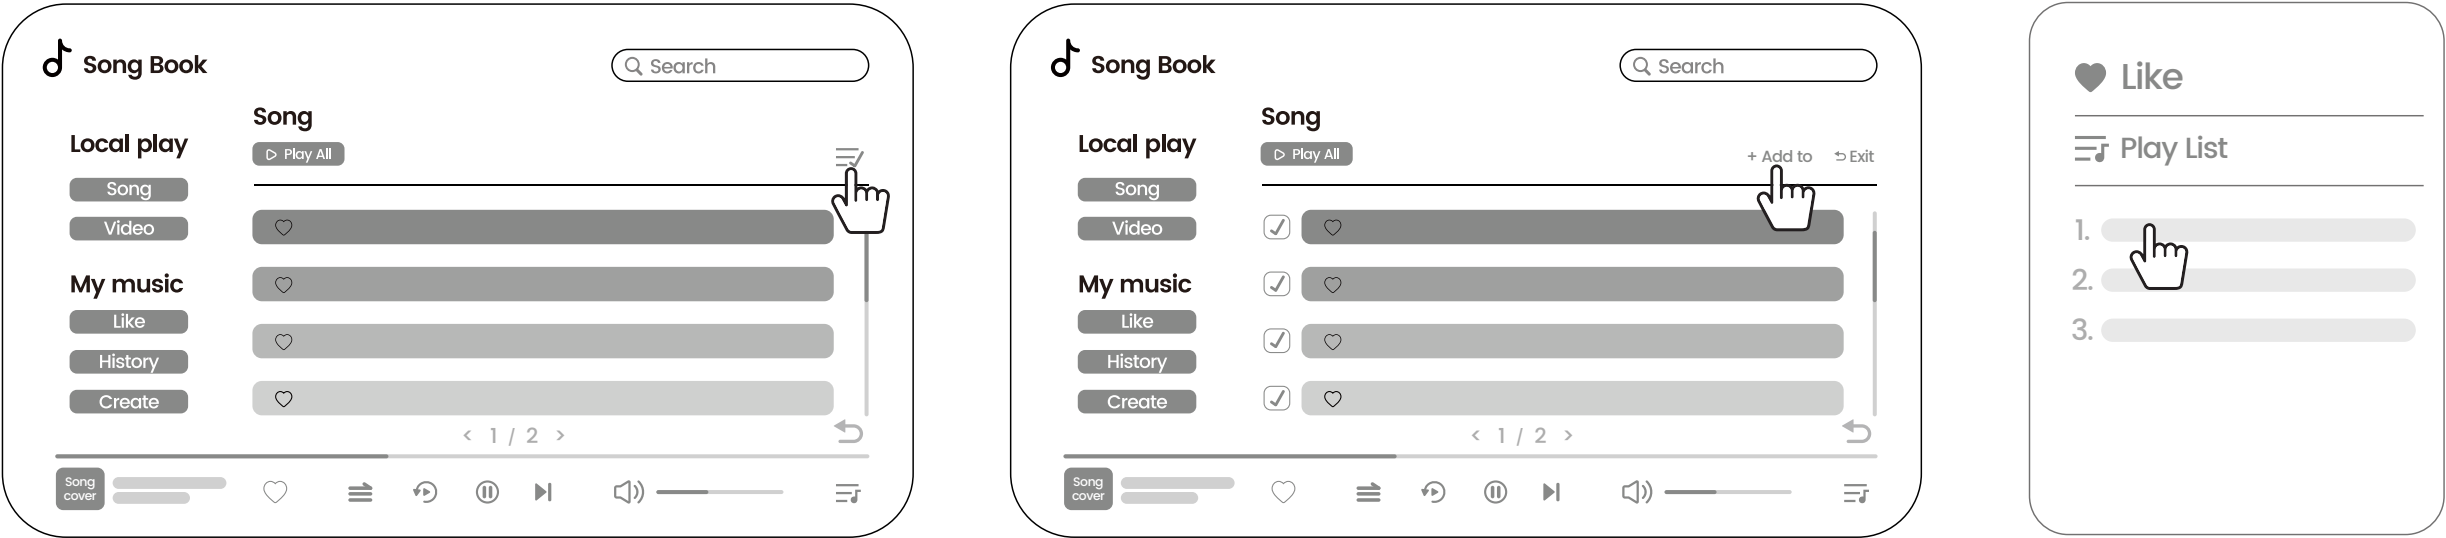

- 1. Long press on a song or click the list icon in the top right corner to activate batch selection mode.
- 2. Click the add icon.
- 3. Select the Playlist to add the tracks.

Page Turning

Click left or right to turn pages.

Quick Jump to Specified Page

Click the page number, enter the page number, and click OK to jump to the specified page.

 
 


View Lyrics

Click the song cover on the bottom status bar to enter the song playback page. If an LRC. lyrics file is in the song folder, lyrics will be displayed.

Call Up Control Bar

Swipe left on the blue vertical bar on the right to call up quick controls for Display, Music Mode, Sound, and Lighting Mode.

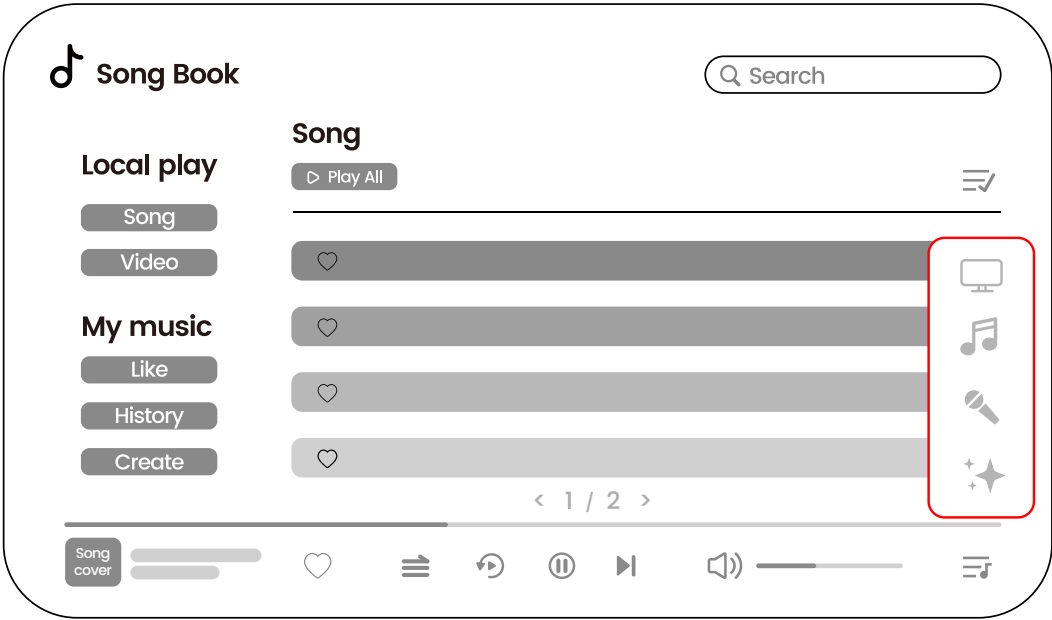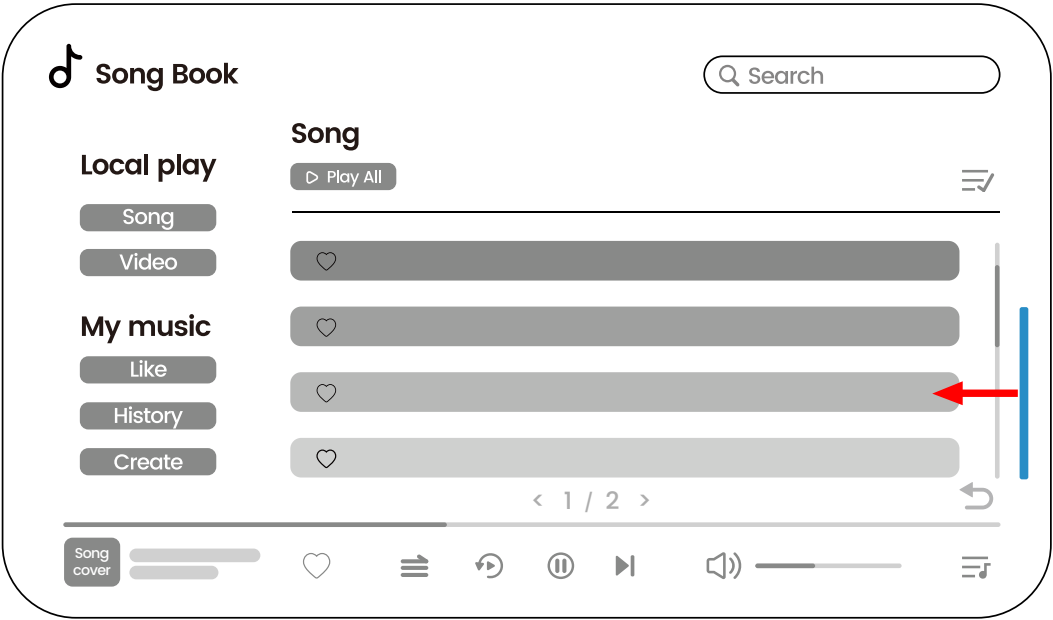


Bluetooth Instructions

Enter Bluetooth Mode

Click the Bluetooth icon on the screen or press the Playback Mode button to switch to Bluetooth mode. The device will automatically reconnect to previously paired devices within one minute and remain in pairing mode for 10 minutes.

 Connect to Bluetooth

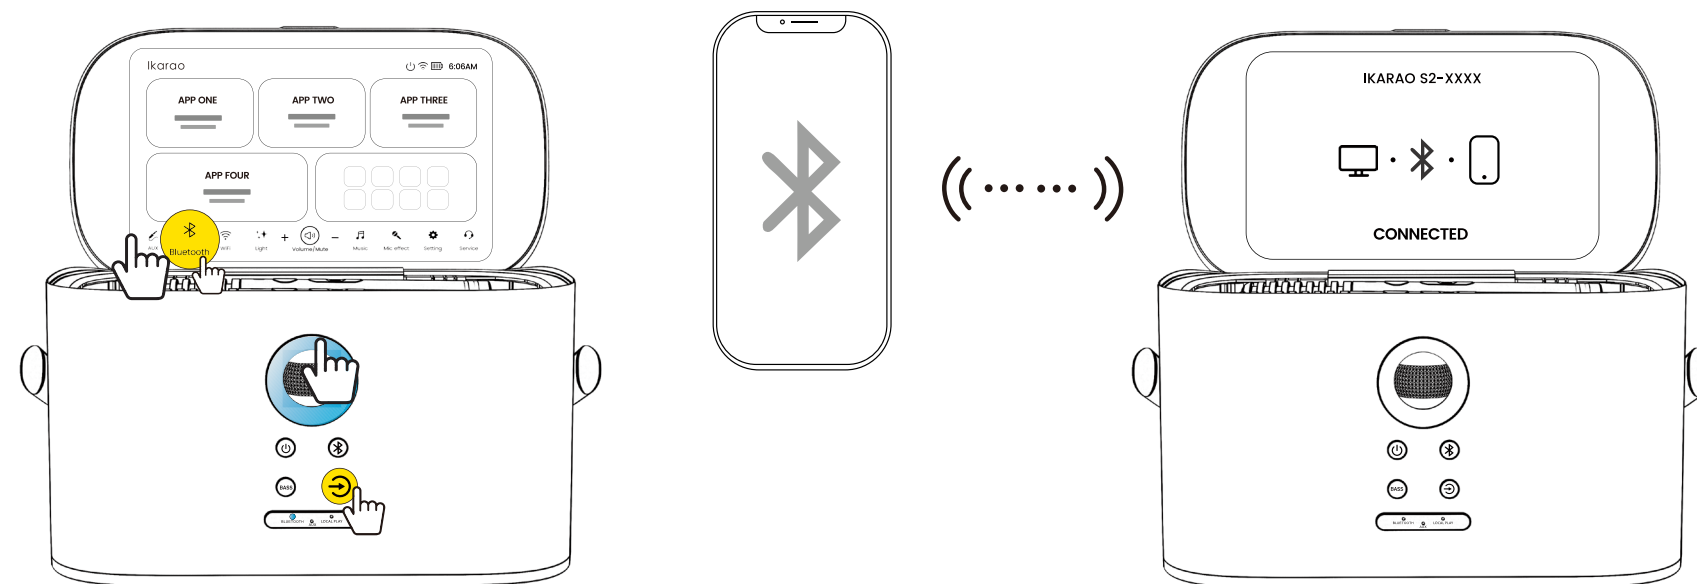

1. Ensure the Bluetooth status is "Bluetooth Pairing".

(if it shows "Bluetooth Connected," refer to [Page 44 - Disconnect Bluetooth](#)).

2. Turn Bluetooth on your device (iPhone, Android, Laptop, iPad, etc.) and find "Ikarao S2-xxxx" to pair.

3. If the connection times out and the indicator light turns off, short-press the Bluetooth button to re-enter pairing mode.

4. Once paired, the status will change to "Bluetooth Connected."

Disconnect Bluetooth

Press the Bluetooth button on the speaker to disconnect the current Bluetooth connection, changing the status to "Bluetooth Pairing." You can also short press the button to enter pairing mode without accessing the Bluetooth Mode.

Bluetooth Playback With Lyrics Display

 
If supported by the music app, lyrics will be displayed automatically. Note that many major Western music apps (Apple Music, Spotify, YouTube Music, Amazon Music, Tidal) do not support this feature due to copyright issues.

View Current Bluetooth Connection Device

Enter the Bluetooth mode settings to see the currently connected device and modify the Bluetooth name if needed.

Third-Party APP

Once connected to Wi-Fi, you can use pre-installed third-party apps for Karaoke, listening to music, watching videos, and more.

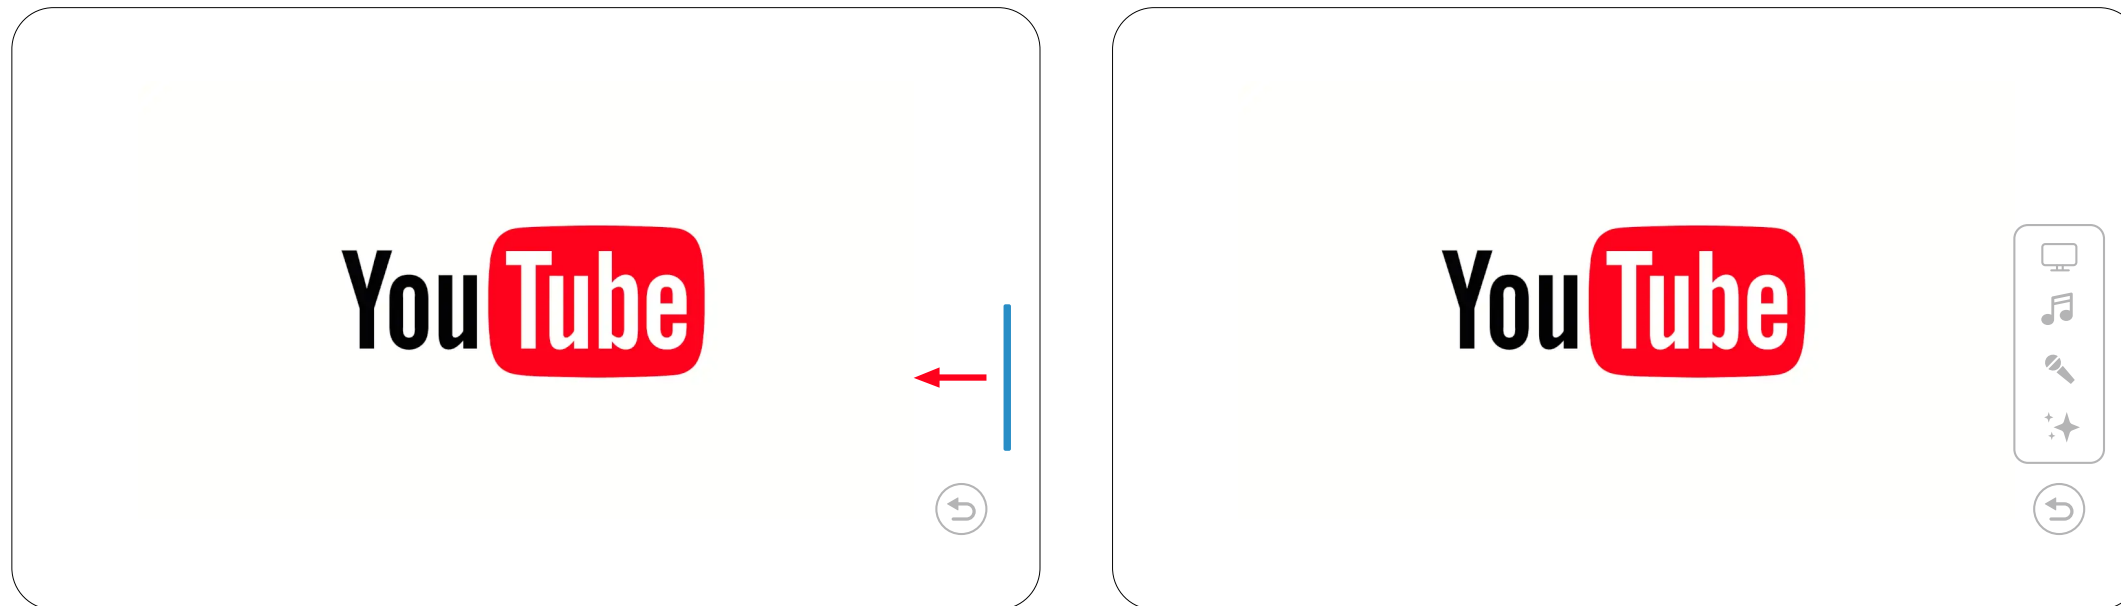

Access Control Bar

Slide the blue vertical bar on the right side of the screen to the left to access quick controls for Display, Music Mode, Sound, and Lighting Mode.

Return to Home From Third-Party Apps

Find the blue return button at the bottom right of the screen. Single-click to go back to the previous page, long-press to return to the home screen.
Note: You can drag the return button to any location on the screen.



04

Discover Repair fault



For more after-sales service and information

please visit: www.ikarao.com/pages/support

Network Issues

What to do if Wi-Fi Connection Fails

1. Ensure the router password is correct.
(enable password visibility settings, refer to  Page 29 - WiFi)
2. Place the router and the speaker closer together, avoiding walls.
3. Connect the speaker to a personal hotspot on your phone to check for router compatibility and network issues.
4. If certain routers have compatibility issues, modify the SSID (wireless network name) and password in the router's management settings to a combination of letters and numbers. Also, check the router's whitelist and blacklist settings. Then, reset the speaker and configure the network again.

What to do if Wi-Fi Connects but can't Access the Internet

This might be due to network fluctuations or issues with your modem. Follow these steps:

1. Check if other devices on the same Wi-Fi can connect to the internet. If they can, contact your network administrator or access the router's management settings to see if there are any restrictions.
2. If other devices also can't connect to the internet, check if the router's connections are loose and if the indicator lights are normal (refer to the router manual).
3. Verify that your broadband service is not overdue for payment.

Why does Wi-Fi Disconnect Automatically?

The speaker will attempt to reconnect to Wi-Fi if the network is temporarily lost. If the network recovers quickly, it might be due to router or network provider fluctuations. If the network remains disconnected for a long time, follow these steps:

1. Ensure the router's power is functioning properly.
2. Check if the router's WAN port is properly connected.

3. Confirm if other devices can connect to Wi-Fi and the internet normally.
4. Verify if the router password has changed.
5. Ensure the router and the speaker are not too far apart or separated by walls. Place them closer together if necessary.
6. If none of the above resolves the issue, try restarting the speaker.

Music or Video Playback Stuttering

1. Check Wi-Fi signal strength. Move the speaker closer to the router if the signal is weak.
2. Ensure the Wi-Fi connection is on the 5G frequency band.
(refer to  Page 29 for instructions)
3. Use another device on the same network to access the content. If it still stutters, the issue may be with the source.

Bluetooth Issues

Music Stuttering over Bluetooth

1. Ensure the source device is playing offline music. Online music might stutter due to network speed or buffering issues.
2. Check the distance between the source device and the speaker. The effective Bluetooth range is generally 10m. Too much distance or a wall can cause stuttering.
3. Ensure there are not too many 2.4GHz devices (e.g., 2.4GHz Wi-Fi routers, phones, smart home devices) nearby, as they can cause interference.
4. Try turning Bluetooth off and on again on the source device, then reconnect.

Unable to Find the Speaker When Pairing Bluetooth

1. Ensure the speaker is powered on and in normal working condition.
2. Make sure the speaker is in Bluetooth audio mode by pressing the Bluetooth button or switching to Bluetooth mode.

3. Ensure there are not too many devices connected to a 2.4GHz Wi-Fi band in the room. Interference can occur. Try connecting the speaker to a 5GHz band.
4. Restart the phone's Bluetooth and try again if there is a system issue.

Bluetooth Fails to Connect Initially Despite Finding the Speaker

1. Check if the speaker is already connected to another Bluetooth device.

(Refer to  Page 38 for detailed steps.)

2. Press the Bluetooth button to re-enter pairing mode and try connecting again.

Bluetooth Reconnection Fails

If the phone previously connected to the speaker but now fails to reconnect, go to the phone's settings: **Settings > Bluetooth > My Devices**, forget the previously connected speaker, and try connecting again.

Displaying Lyrics via Bluetooth

Displaying lyrics over Bluetooth requires music app support. Most major music apps in Western regions do not support this feature due to copyright issues, including Apple Music, Spotify, YouTube Music, Amazon Music, and Tidal.

Microphone Issues

No Sound from Microphone

1. Check if the microphone is successfully connected. A solid blue indicator light, a microphone icon on the screen, and the ability to switch microphone effects by pressing the power button indicate a successful connection.
2. If not connected, restart the microphone and try reconnecting. If connected but still no sound, try moving the main unit away from other 2.4GHz devices and restart.

Music Volume Drops When Singing with Microphone

Check if the Music Ducking feature is accidentally enabled

Microphone Won't Turn On

1. Ensure you are holding the power button for at least 2 seconds.
2. If it still won't turn on, try charging the microphone. Ensure the speaker has sufficient battery or is connected to a power source. The charging indicator on the microphone should light up while charging.

Local Media Player Issues

Playing Music from TF Card, USB Drive, or External Hard Drive

1. Insert the TF card, USB drive, or external hard drive into the corresponding port.
2. A prompt will appear on the screen: "USB Drive: The machine detects the insertion of USB, do you want to enter the local media?" Click Yes.
3. If you accidentally click No, go to **MUSIC > LOCAL MEDIA** to access the local media player.

No Lyrics in Local Media Player

The local media player requires an LRC file to display lyrics. Ensure the LRC file name matches the music file name except for the extension. For example, if the music file is named "Love The Way You Lie.mp3," the lyrics file should be named "Love The Way You Lie.lrc."

Karafun Issues

How to Get a Free 6-Month KaraFun VIP?

 
Scan the QR code to watch the official guide and follow the steps to redeem your VIP.

1. Internet connection required
2. One redemption per device




YouTube SONG SEARCH INSTRUCTIONS

01 CLICK ON THE YOUTUBE ICON ENTER YOUTUBE

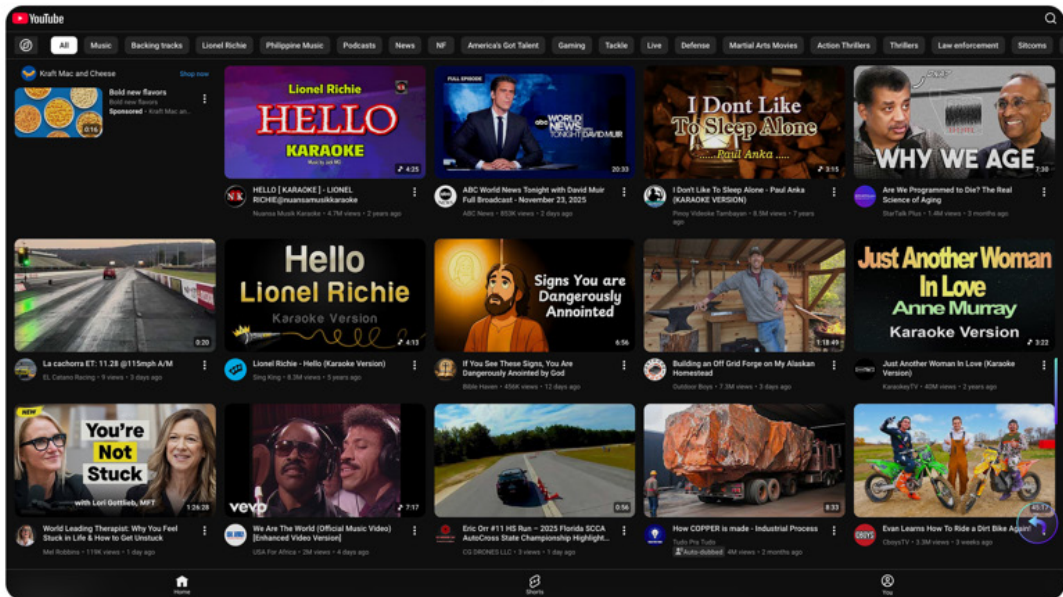

 02 SEARCH SEARCH "SONG TITLE/ARTIST+KTV/LYRICS/KARAOKE, ETC"


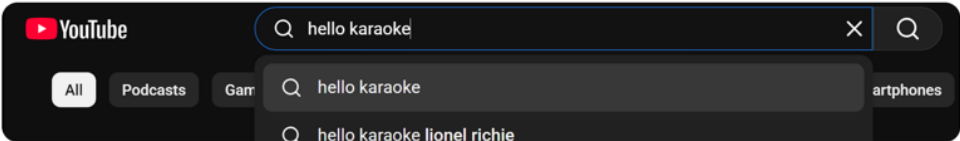


For example: input "hello karaoke", click search

03

SELECT AND PLAY

  USERS CAN CHOOSE THEIR FAVORITE KARAOKE SONGS TO SING

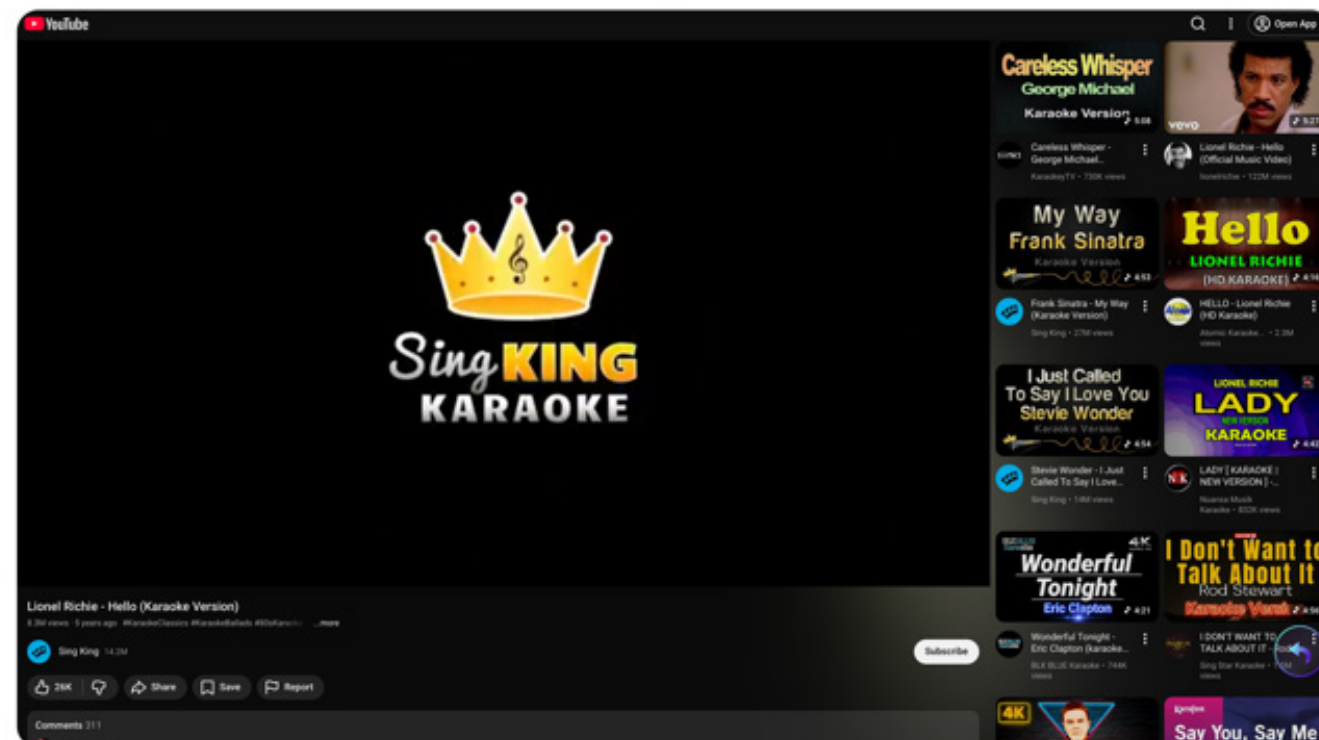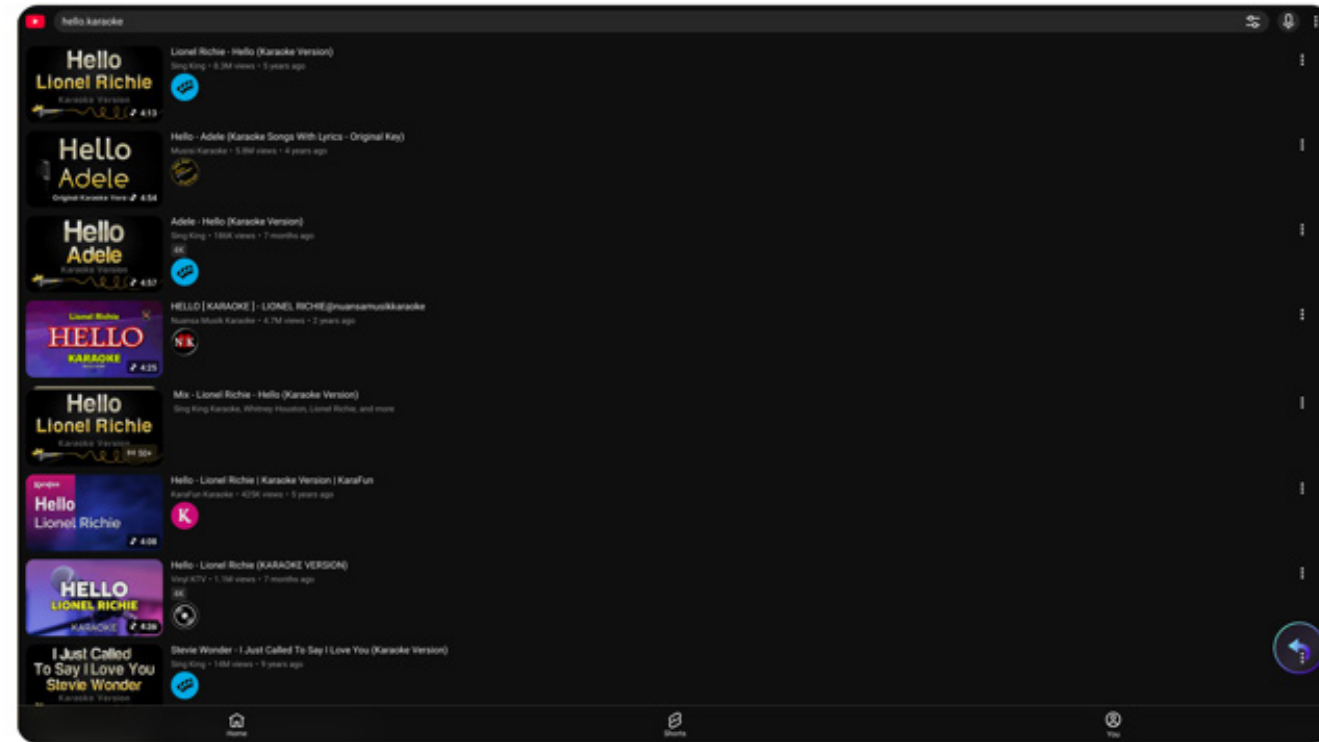



05

Technical Notes

Safety Instructions

Ensure proper use of the product. Please read your User Manual carefully before use, especially the following safety instructions.

General Safety Tips:

1. Avoid extreme high or low temperatures.
2. Keep away from moisture, rain, or other liquids.
3. Do not expose to direct sunlight.
4. Avoid dropping or severe impacts.

Battery and Charging:

1. Use the specified charger and power cable.
2. Keep away from flammable materials while charging.
3. Do not attempt to replace the battery yourself.
4. Avoid overcharging or completely discharging the battery.

Electrical Safety:

1. Ensure the power outlet meets the product requirements.
2. Avoid contact with live electrical parts.
3. Do not use in a damp environment.

Health and Environment:

1. Prolonged use may cause eye strain or other health issues; take regular breaks.
2. Do not use while driving or operating machinery.

3. Do not dispose of it improperly; follow local recycling regulations.

Child Safety:

1. Small parts may pose a choking hazard; keep away from children.
2. Children should use the product under adult supervision.

Radiation and Interference:

1. The product may cause electromagnetic interference; avoid using it near sensitive equipment.
2. Comply with local regulations regarding RF devices.

Maintenance and Cleaning:

1. Turn off the power and unplug before cleaning.
2. Do not use corrosive cleaning agents.

Emergency Handling:

1. If the product emits smoke, odor, or shows any abnormal condition, stop using it immediately and disconnect the power.
2. If the battery swells or leaks, avoid direct contact and follow local disposal regulations.

Battery and Power

This section describes the correct usage of the battery and methods to extend its lifespan. Improper use can shorten battery life or cause leakage, overheating, fire, or explosion.

Battery Usage

1. Idle batteries gradually lose charge. Recharge the battery within a day or two before use. Turn off the product when not in use to extend battery life.
2. Battery performance declines in cold environments; low-charge batteries may not work properly in cold conditions.

Charging

1. Use the provided adapter or power cable for charging. Charging time increases when the temperature is below +10°C or above +35°C. Do not charge the product when the temperature is above +40°C or below +5°C.
2. It is normal for the product to heat up during charging or after use.
3. To maintain battery health, charge the battery at least once every three months.

Battery Life

1. When the product's battery life noticeably decreases, the battery has reached the end of its life and needs to be replaced. Contact the Ikarao support team or a dealer for replacement.
2. Long periods without charging can degrade battery quality. Regularly charge the battery.

Storage

For long-term storage, charge the battery to about 1/2 to 2/3 capacity and store it at room temperature.

Screen Use

1. If the display screen is damaged, avoid contact with the liquid crystal. In case of any of the following incidents, take the specified emergency measures.
2. Skin Contact: Clean the area with a cloth, apply soap, and wash thoroughly with water.
3. Eye Contact: Rinse the affected eye with clean water for at least 15 minutes and seek medical help.
4. Ingestion: Rinse your mouth thoroughly with water, drink a large amount of water to induce vomiting, and seek medical help.

Certifications and Declarations



Tested To Comply With FCC Standards
FOR HOME OR OFFICE USE
Contains FCC ID:2BCRN-Shell S1

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
2. And this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

 
Radiation Exposure Statement(Only for speaker): This equipment complies with FCC radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiation & your body.



Dongguan Aika Electronic Technology Co., Ltd. Declares that this product is in compliance with Directives 2014/53EU and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.ikarao.com



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Dongguan Aika Electronic Technology Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

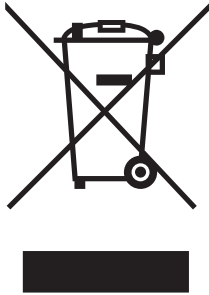

This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.



The KC (Korea Certification) mark signifies compliance with Korea's product safety requirements for electrical and electronic equipment and is issued by Korea-based certification bodies that have been approved by the Korea Standards Association.



The UL mark shows the product is tested by UL and meets UL Standards of Safety for the U.S.



HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Technical Specifications

Dimensions:	25.4*14*15cm
Weight:	Approx. 2.83 kg, including two wireless microphones
Speaker Dimensions:	2.75 inch *2
Frequency Response:	55Hz-18KHz
Speaker SPL:	102dB
Suitable for areas	15-80 m² 150-800 ft²
Peak Power:	140W
Bluetooth Version:	V5.4
Wi-Fi Protocol:	802.11ac/b/g/n
Signal-to-Noise Ratio (20K LPF):	≥ 85dBA(Rated power)
Screen Size:	8 inch
CPU:	Quad-core Cortex-A35
RAM:	2GB
EMMC:	32GB
DC Input:	5-20V == 1A-2.25A(45W Max)
Standby Power Consumption :	≥ 0.5W

Speaker Charging Time:	≤ 3H (45W quick charge)
Speaker Battery Life:	≥ 7H(screen on), ≥ 8H(screen off)
Microphone Charging Time:	≤ 5H
Microphone Battery Life:	≥ 20H
Microphone Type:	Dynamic
Microphone Size:	2*Φ35×H183mm
Microphone Battery Capacity:	1500mAH
Microphone Frequency Response(By-Pass)	60Hz-12KHz (±1.5dB)

NOTE:Specifications and performance are subject to change without notice. Ikarao will not be held liable for any errors this manual may contain. The appearance of the product may differ from that described in this manual.

Ikarao[®]



@ikaraoofficial @IKARAO



@IKARAO



@IKARAO



@ikaraoofficial