


Ikarao®



MicBOX PRO

User Manual **EN**

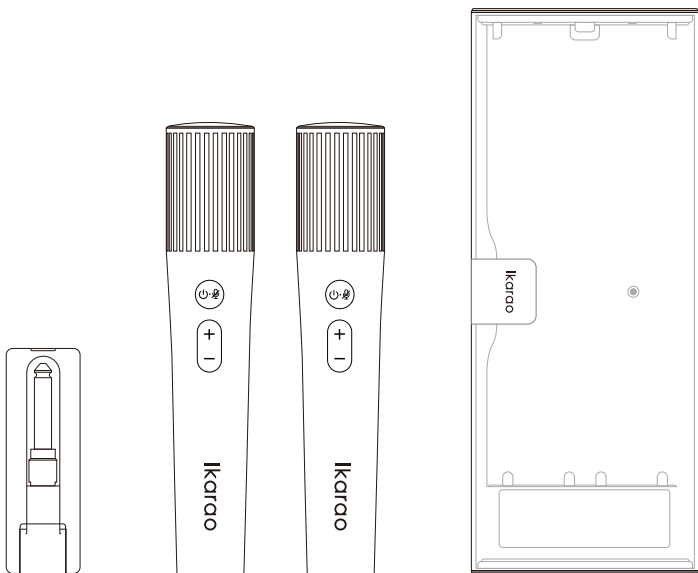


Introduction:

Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the product. Keep the manual where it will be read by all who use the product.

For the Latest Information

The latest versions of the manuals are available from:
<https://www.ikarao.com/pages/support>

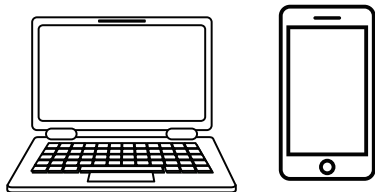

The website can be accessed not only from your computer but also from smartphones and tablets.




Scan the QR code to access our official after-sales support service. For any questions or support, please contact us at support@ikarao.com.


Table of Contents

Package Contents.....	4
First-Time Use	5
Microphone Operation	6
Wireless Receiver Operation	7
Reconnection and Rebinding	8
Sanitizing Storage Case	9
Safety Precautions.....	10


Package Contents

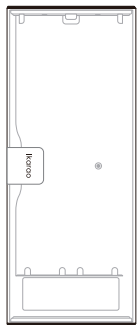

Disinfection Box

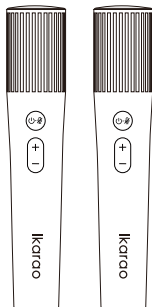

Wireless Microphones



Wireless Receiver



Manual




Warranty Card



USB Type-C Cable



First-Time Use

Hold the receiver and microphone power buttons for 2s. Pairing is complete when the white light stays on. Connect to an audio device.

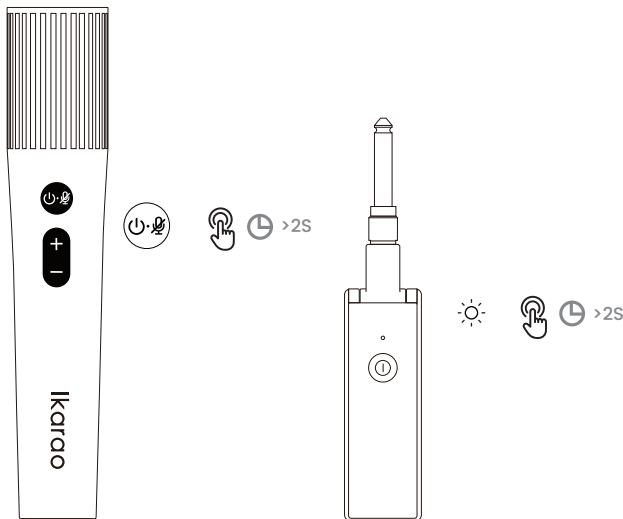

Prompt: If unpaired for 10 minutes, the microphone powers off automatically.

Microphone operation

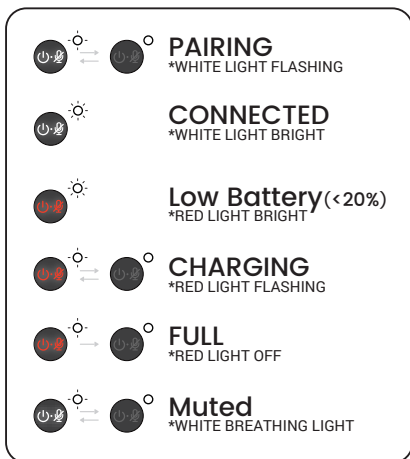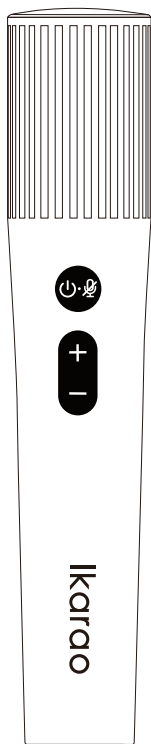

Microphone Button Function:

Hold Power 2s: On/Off


Double-press Power: Mute/Unmute

Press Volume: Adjust one level



Hold Volume: Continuous adjustment

Note: White light flashes at max/min volume.

Wireless Receiver Operation

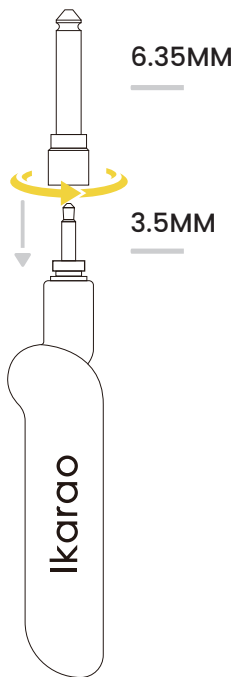

Plug the receiver into the correct port to avoid device malfunction.

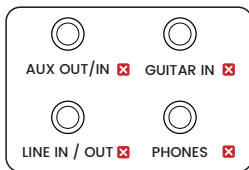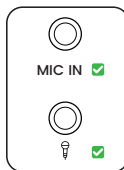

Indicator Light Status.



On/Off: Hold 2s, white light on/off



Low Battery: Red flashes



Full: White on / red off



Charging: Type-C, red breathing



Unconnected: Auto-off after 15 min



Connected: Mic white light stays on

Reconnection and Rebinding




Reconnection

1. Move closer or restart both the microphone and receiver.
2. If the microphone is too far from the receiver or blocked by obstacles, the connection may drop.


Rebinding

Press the power button 5 times in quick succession within 10s after boot.



Note: Rebinding is only required when replacing the receiver, pairing fails, or after service repair. For temporary disconnection, restart the microphone and receiver first.

Sanitizing Storage Case

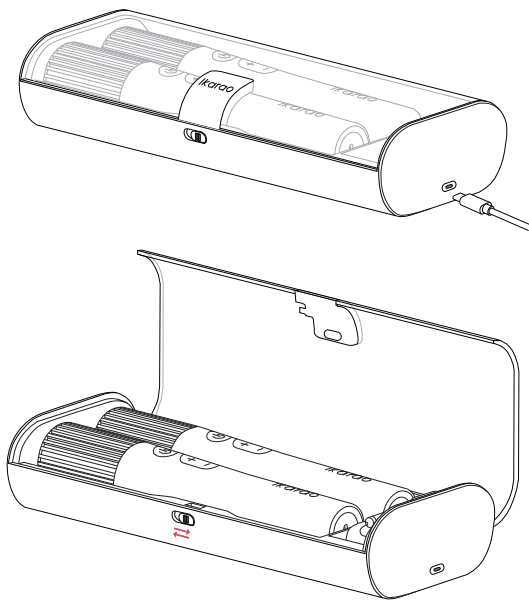

Sanitizing Process

1. Place both microphones in the case.
2. Close the lid. Sanitizing starts automatically.
3. Wait 60 seconds, then remove the microphones.

Note: Opening the lid stops the sanitizing cycle. Close it to restart.
Warning: Do not look directly at the UV-C light.

Safety Precautions

Temperature:

Use/charge at 0°C–35°C.

Moisture:

Not waterproof; keep away from rain, splashes, and humidity.

Range:

2.4G range up to 30 m+; walls, metal, or interference may reduce range.

Restrictions:

Avoid sunlight, extreme temperatures, dust, drops, and strong impact.

Safety:

Keep away from heat, fire, water, and out of reach of children during charging or sanitizing.

Charging:

Use a compliant cable and keep away from flammables. Stop use if swelling, leakage, odor, smoke, or overheating occurs.

UV:

Do not look at UV light or expose skin. Start only with lid closed.

Care:

Power off before cleaning; keep dry and ventilated.